




Cables run behind here to the pillar.
CAN cable comes around to the back of the chair.
The VR500 cable and 4G cable goes up the pillar
into the roof lining.
Yellow Y cable goes to the left and sits
behind the screen on the dash.

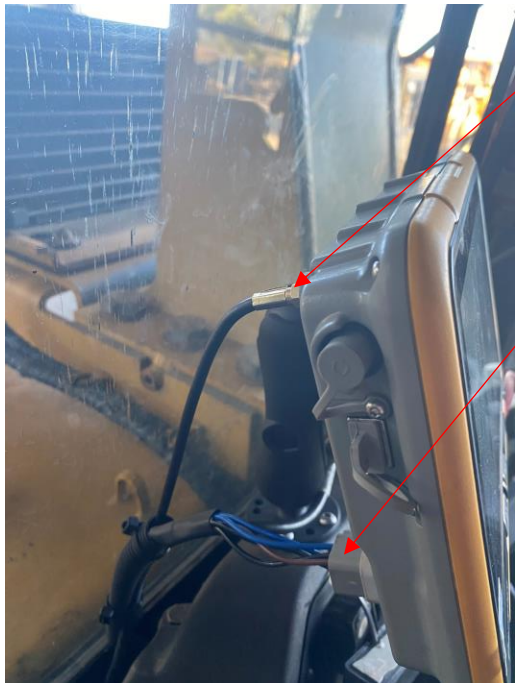

4G – SMA connector

Power connector



RAM ball mount. Secured by 3 bolts.
Drill 3 holes through dash and held in
place by 3 nuts

Remove this front dash to get underneath
to secure the bolts



4G cellular cable, runs outside to the magbase antenna.
Use grommet or silicone to plug the hole around the conduit.

VR500 cable with bulkhead – Use a 22mm hole saw to create
a hole for the bulkhead to go through. Use washer on the
outside to create watertight seal.



