



**GRADEMETRIX™ DOZER**  
**INSTALLATION GUIDE**  
**Revision: A2**



Additional information, documentation, and software can be found at:

[WWW.HGNSS.COM](http://WWW.HGNSS.COM)

Copyright 2021

## Device Compliance, License and Patents

### Device Compliance

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

This device may not cause harmful interference, and  
this device must accept any interference received, including interference that may cause undesired operation.

This product complies with the essential requirements and other relevant provisions of Directive 2014/53/EU. The declaration of conformity may be consulted at <https://hemispheregnss.com/about-us/quality-commitment>.

E-Mark Statement: This product is not to be used for driverless/autonomous driving.

### Copyright Notice

Copyright Hemisphere GNSS, Inc. (2021). All rights reserved.

No part of this manual may be reproduced, transmitted, transcribed, stored in a retrieval system or translated into any language or computer language, in any form or by any means, electronic, mechanical, magnetic, optical, chemical, manual or otherwise, without the prior written permission of Hemisphere GNSS.

### Trademarks

Hemisphere GNSS®, the Hemisphere GNSS logo, TRACER™, Crescent®, Eclipse™, e-Dif®, L-Dif™, PocketMax™, S320™, SBX-4™, Vector™, Vega™, Phantom™, Cygnus™, Atlas™, aRTK, SureFix™, and Athena™ are proprietary trademarks of Hemisphere GNSS, Inc. Other trademarks are the properties of their respective owners.

### Patents

Hemisphere GNSS products may be covered by one or more of the following patents:

Patents			
6111549	6876920	7400956	8000381
6397147	7142956	7429952	8018376
6469663	7162348	7437230	8085196
6501346	7277792	7460942	8102325
6539303	7292185	7689354	8138970
6549091	7292186	7808428	8140223
6711501	7373231	7835832	8174437
6744404	7388539	7885745	8184050
6865465	7400294	7948769	8190337
8214111	8217833	8265826	8271194
8307535	8311696	8334804	RE41358

Australia Patents	
2002244539	2002325645
2004320401	

*Continued on next page*

## Device Compliance, License and Patents, Continued

---

**Notice to Customers**      Contact your local dealer for technical assistance. To find the authorized dealer near you:

Hemisphere GNSS, Inc  
8515 East Anderson Drive  
Scottsdale, AZ 85255 USA  
Phone: (480) 348-6380  
Fax: (480) 270-5070  
[PRECISION@HGNSS.COM](mailto:PRECISION@HGNSS.COM)  
[HTTPS://WWW.HEMISPHEREGNSS.COM/](https://www.hemispheregnss.com/)

---

**Technical Support**      If you need to contact Hemisphere GNSS Technical Support:

Hemisphere GNSS, Inc.  
8515 East Anderson Drive  
Scottsdale, AZ 85255 USA  
Phone: (480) 348-6380  
Fax: (480) 270-5070  
[SUPPORT.HGNSS.COM](mailto:SUPPORT.HGNSS.COM)

---

**Documentation Feedback**      Hemisphere GNSS is committed to the quality and continuous improvement of our products and services. We urge you to provide Hemisphere GNSS with any feedback regarding this guide by opening a support case at the following website:

[HTTPS://HEMISPHERE.ATLASSIAN.NET/SERVICEDESK/CUSTOMER/PORTAL/2/USER/LOGIN?DESTINATION=PORTAL%2F2](https://hemisphere.atlassian.net/servicedesk/customer/portal/2/user/login?destination=portal%2F2)

---

## Table of Contents

---

<b>Device Compliance, License and Patents .....</b>	<b>2</b>
<b>Chapter 1: Getting Started.....</b>	<b>6</b>
Overview .....	6
Getting Started .....	7
Tools List .....	8
Preparing for Installation .....	9
Safety Information and Warnings .....	10
What's Included in Your Kit .....	11
Machine Inspection Checklist.....	15
<b>Chapter 2: GMS-1 Sensor Installation .....</b>	<b>16</b>
Overview .....	16
GMS-1 Sensor Installation .....	17
<b>Chapter 3: Installing the Sensor Junction Box .....</b>	<b>22</b>
Overview .....	22
Install the Sensor Junction Box.....	23
<b>Chapter 4: Installing the VR500 Antenna.....</b>	<b>25</b>
Overview .....	25
Install the VR500 Antenna .....	26
<b>Chapter 5: Installing the IronTwo Control Box .....</b>	<b>29</b>
Overview .....	29
Install IronTwo Control Box .....	30
Install the Power Cable .....	32
Install Cable Routing .....	33
<b>Chapter 6: GradeMetrix System .....</b>	<b>34</b>
Overview .....	34
Measure and Set Up Equipment .....	35
Configure Machine Measure .....	37
Set Up Sensor .....	40
Calibrate System.....	43
Quick Calibrate .....	45

3D Calibration .....	47
Verify Machine Accuracy .....	62
Save Machine Settings .....	65
Appendix A: Troubleshooting .....	67
Overview .....	67
Troubleshooting .....	68
Appendix B: Technical Specifications .....	70
Overview .....	70
VR500 GNSS Receiver.....	71
IronTwo .....	76
GMS-1 Sensor .....	78
Appendix C: Cable Pin-Outs .....	80
Overview .....	80
Part Number 051-0426-10 .....	81
Part Number 051-0406-10 .....	83
Part Number 051-0407-10 .....	84
VR500 Installation Schematic .....	85
Index.....	86
End User License Agreement.....	87

---

# Chapter 1: Getting Started

## Overview

---

### Introduction

Chapter 1 provides you with the information and proper tooling needed to begin a GradeMetrix Dozer installation.

It is recommended for only an experienced service technician perform the installation and configuration of the Hemisphere GradeMetrix system.

---

### Contents

	Topic	See Page
	Getting Started	7
	Tools List	8
	Preparing for Installation	9
	Safety Information and Warnings	10
	What's Included in Your Kit	11
	Machine Inspection Checklist	15

---

## Getting Started

---

### **Introduction**

This section lists the tools required, preparation, and power setup necessary to prepare your machine for the GradeMetrix dozer system installation.

---

## Tools List

---

### Tools list

A variety of tools are needed to properly set up and install your GradeMetrix dozer system.

Review the following list and locate these required tools prior to beginning installation:

- ☐ Slotted screwdriver
  - ☐ Phillips screwdriver
  - ☐ Adjustable wrench
  - ☐ ½" & 3/8" ratchet set
  - ☐ Inch sockets
  - ☐ Metric sockets
  - ☐ Cable tie cutters
  - ☐ Allen wrench set (inch)
  - ☐ Allen wrench set (metric)
  - ☐ Torx wrench
  - ☐ Wire stripper / Crimp tool
  - ☐ GNSS base/rover
  - ☐ Open wheel measuring tape
  - ☐ Cable ties
  - ☐ Split tube or other cable protection
  - ☐ Electrical Tape
  - ☐ Heat Shrink
  - ☐ Electrical terminals i.e., spade, ring etc.
  - ☐ Thread locker i.e., Loctite or similar
  - ☐ Nickel anti-seize grease or similar
  - ☐ Cold Gal and Machine-color paint if welding
-



## Preparing for Installation

---

### Prepare for installation

To prepare for a dozer installation, place the dozer on a flat surface.

Locate a clean source of power and a safe mounting location for the IronTwo control box. Check to ensure the control box and the GMS-1 sensors have power.

**Important:** The IronTwo must receive 7 – 36 VDC of input power from the machine (most machines should provide 24 V directly from the battery).

**Note:** The IronTwo must be installed so the operator can see the screen. Use care not to place the IronTwo in a location that might compromise visibility or block an exit from the cab.

---

## Safety Information and Warnings

---

### Safety information and warnings

Refer to the safety manual of each machine for proper operation and safety precautions. Store this guide and all related safety information with related machine manuals for future reference.

Prior to installing and operating GradeMetrix, read and follow all safety precautions as outlined in this manual.

Review and adhere to the follow safety warnings:

- Before you begin working on the machine, use the machine's master switch to disconnect power to the machine.
- A human operator is required to manually maintain a safe operating speed.
- GradeMetrix is a grade reference tool and is not designed to replace the machine's operator. **Do NOT allow a driver to operate without safety instructions. Avoid obstacles to prevent human, machine, and property injury.**

**Important: The safety warnings contained in this manual are intended as guidelines and are not meant to be a complete list of potential hazards.**

---

## What's Included in Your Kit

### Kit contents

Your GradeMetrix kit contains the parts listed in Table 1-1, Installation Kit Contents.

**Table 1-1: Installation Kit Contents**

Level	Part Number	Description	Quantity
1	051-0406-10	CBL, IO, VR500, 22-PIN to 5-PIN, 3.5M	1
1	051-0407-10	CBL,IO,IronOne Bulkhead, 4m	1
1	051-0426-10	HGNSS IronTwo Bulkhead Cable	1
1	051-0425-20	Cable, M12 CAN M/F Sensor, 3m	1
1	050-0022-01	CBL,ADO,POWER	1
1	050-0046-01	CBL,ADO,PWR ADAPT	1
1	150-0053-10	IronOne BT_Wifi Antenna	1
1	150-0054-10	IronOne Cellular Antenna	1
1	150-0056-10	Antenna, BT_WiFi, ANT-GXH918-TNC_M	1
1	676-0036-0	ADAPTER,MINI-C,N2K,BULKHEAD	1
1	710-0148-10	IronOne Flush Mount Kit	1
2	604-0054-000	RAM MNT, 2.43 INCH BASE, 1.5 INCH BALL	1
2	675-1211-000#	SCR,SEMS-INT.TOOTH,10-32,1/2",PHIL,SS	4
1	710-0149-10	IronOne U-Mount Kit	1
2	604-0015-000#	ASSY,ARM.W/U-BOLT.BASE.AND.ROUND.BASE	1
2	675-1211-000#	SCR,SEMS-INT.TOOTH,10-32,1/2",PHIL,SS	4
1	710-0157-10	KIT, VR500 MACH. CTRL MOUNT, PERMANENT	1
2	602-1185-10	PLATE, WELDED, VR500 MC MOUNT	1
3	676-1102-10	M8X1.25, HEX WELD NUT, STEEL	4

*Continued on next page*

## What's Included in Your Kit, Continued

Kit contents,  
continued

**Table 1-1: Installation Kit Contents (continued)**

Level	Part Number	Description	Quantity
2	602-1186-10	BRACKET, VR500 MC MOUNT	2
2	675-1342-10	SCR, BUTTON HEAD, HEX, M8X1.25, 20MM, SS	8
2	678-1129-000#	WSHR,LCK.HEL,M8,2MM-THK,SS- A4	8
2	678-1146-10	WSHR, FLT, 0.344" ID, 0.75" OD, SS 18-8	4
2	681-1076-10	PLUG, LDPE, FOR 23.4mm DIA HOLE	4
1	710-0159-10	KIT, VR500 MACH. CTRL MAGNETS	1
2	478-0020-10	MAGNET,BASE,NEODYMIUM,1.75" OD, .375"THK	4
2	675-1343-10	SCR, 1/4-20X1.25", TORX, FLAT HEAD, SS	4
2	676-1105-10	NUT, HEX, NYLOC, 1/4-20,SS.18-8	4
2	678-1147-10	WSHR, FLT, 0.265" ID, 0.875" OD, SS 18-8	4
1	710-0160-10	KIT, M12 JUNCTION BOX / BULKHEAD ADAPTER ASSY	1
2	051-0409-10	CBL,M12 CAN,R/A(M)-STR(F),5- WAY,5M	1
2	400-0351-10	CONN,RCPT,M12(M)-(F),5-WAY	1
2	601-1291-10	END PLATE, BULKHEAD ADAPTER, M12 SERIES	2
2	602-1184-10	BRACKET, M12-5PIN ADAPTER	1
2	675-1349-10	SCR,M6x1.0mm,25mm,SHC,SS.18- 8	2
2	676-1086-000	Nut, Nylock, M6, SS	2
2	678-1136-0	WSHR.FLT,M6,12mmOD,SS.18-8	4

*Continued on next page*

## What's Included in Your Kit, Continued

Kit contents,  
continued

**Table 1-1: Installation Kit Contents (continued)**

Level	Part Number	Description	Quantity
2	678-1151-10	WSHR,INTERN-TOOTH,M16,26mmOD,SS.18-8	1
2	681-0021-10	GROMMET, 5/8"ID, 1-1/8"OD, EPDM,BLACK	1
1	710-0209-10	KIT, DOZER COIL CABLE, 10 FT	1
2	051-0413-10	CBL, CAN, 5-pin M12,(F)-(F), 10 Ft. COIL	1
2	675-1349-10	SCR,M6x1.0mm,25mm,SHC,SS.18-8	2
2	676-1086-000	Nut, Nylock, M6, SS	2
2	678-1136-0	WSHR.FLT,M6,12mmOD,SS.18-8	4
2	699-0041-10	CARABINER, 5/16" THK , SS	2
2	699-0042-10	P-CLAMP, 3/8" ID, EPDM CUSHION, SS	2
1	710-0215-11	KIT, SENSORS, GMS-1, DOZER	1
2	710-0217-10	KIT, GMS-1 SENSOR MOUNT, WITH COVER	1
2	710-0218-10	KIT, GMS-1 SENSOR MOUNT, BASIC	1
2	750-5019-10	SENSOR,GMS-1,DUAL AXIS,VER,M12-5PIN,M-F	1
2	750-5020-10	SENSOR,GMS-1,DUAL AXIS,HOR,M12-5PIN,M-F	1
1	710-0230-10	GradeMetrix Consumables Kit, VR500	1
2	675-1346-10	Scr,M5x0.8mm,20mm,BHC,SS.18-8	2
2	675-1359-10	SCR,MACH,M6X1mm,20mm,SHC,SS. NYL.PEL	2
2	675-1360-10	SCR,M6x1.0-16L,HEX HEAD,SERRATED FLANGE	2
2	675-1363-10	SCR,MACH,M6X1mm,12mm,SHC,SS. NYL.PEL	2
2	675-1367-10	Scr,M5x0.8mm,10mm,PPHC,SS.18-8,BL-OX	2

*Continued on next page*

## What's Included in Your Kit, Continued

Kit contents,  
continued

**Table 1-1: Installation Kit Contents (continued)**

Level	Part Number	Description	Quantity
2	676-1103-10	Nut, HEX, M5x0.8mm, SS.18-8	2
2	677-2019-000#	TIE.WRAP, 5.5", 30LBS, 0.18"TH, N YL.BLK	2
2	678-1136-0	WSHR.FLT, M6, 12mmOD, SS.18-8	2
2	678-1149-10	Wshr, Flat, M5, 10mmOD, SS.18-8	2
2	678-1150-10	Wshr, Lock.Split, M5, 9.2mmOD, S S.18-8	2
1	750-0245-10	CAN TERMINATION RESISTOR, M12(F)	1
1	752-0028-10	VR500 RECEIVER, HGNSS	1
1	752-0040-10	HGNSS IronTwo Display	1

**NOTE:** Due to manufacturing processes outside of HGNSS purview, the installer may be required to adapt the GradeMetrix kit to your individual system.

## Machine Inspection Checklist

---

### **Machine Inspection Checklist**

To ensure peak performance, GradeMetrix should be installed only after a thorough machine inspection has been conducted.

To avoid bodily and machine injury, follow the machine inspection checklist below:

- Park the machine on a clean and level surface.
  - Turn off the machine and remove +power from the batteries.
  - Lower all implements to the ground.
  - Apply the parking brake and chock wheels if necessary.
  - Inspect any drilling and/or cutting sites to ensure no electrical wiring damage will be incurred.
  - Periodically re-measure the blade width at the tips to adjust accuracy due to blade wear.
-

## Chapter 2: GMS-1 Sensor Installation

### Overview

---

#### Introduction

The dozer uses a GMS-1 sensor on the chassis and a GMS-1 sensor on the blade for pitch and roll. This chapter details the steps required for installing these sensors.

---

#### Contents

Topic	See Page
GMS-1 Sensor Installation	17

---



## GMS-1 Sensor Installation

---

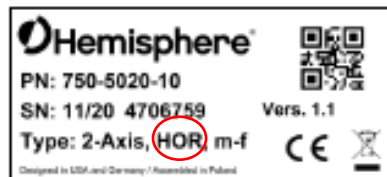
### Sensors

There are two types of GMS-1 sensors. There is a horizontal sensor (P/N: 750-5020-10) used on the chassis and a vertical sensor (P/N: 750-5019-10) used on the blade.

It is extremely important to ensure the horizontal and vertical sensors are mounted in the correct location.

The labels on the GMS-1 sensors clearly indicate each sensor.

Below is a horizontal sensor label.



Below is a vertical sensor label.



The mounting bracket must be welded to the appropriate locations:

- **Body sensor** – The horizontal slope sensor used to measure the pitch and roll of machine.
- **Blade sensor** - The vertical tilt sensor used to measure the blade lift.

**Important: It is important to choose safe welding locations for each sensor. The blade sensor should be welded as close to the center of rotation of the blade as possible. The coil cable should be run to avoid all pinch points and not placed in front of the dozer's radiator, as heat from the radiator will reduce the cable's lifespan.**

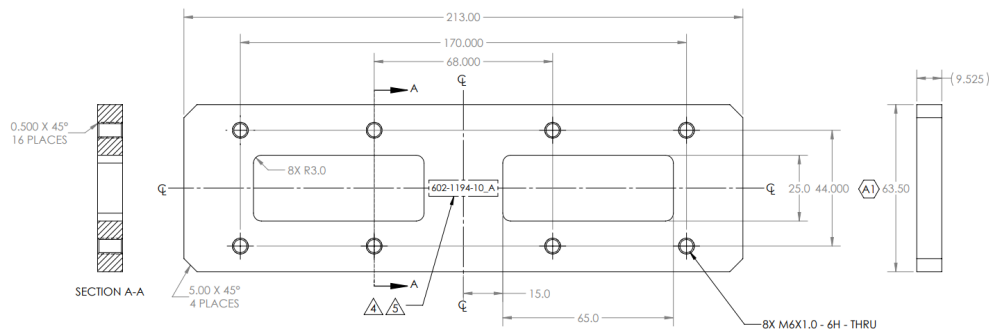
---

*Continued on next page*

## GMS-1 Sensor Installation, Continued

### Brackets

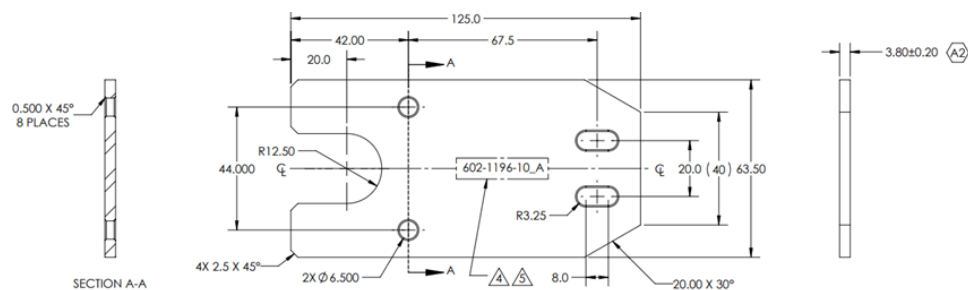
The GMS-1 sensors include a base bracket (P/N: 602-1194-10) that can be welded to the machine. This bracket has two welding holes, so the bracket can be welded to the machine and hide the weld. Refer to Figure 2-1 bracket dimensions.



**Figure 2-1: Bracket dimensions**

Strain relief wings are also included. Screw the strain relief wing onto the bracket with the provided 14mm M6x1mm screws. The CAN cable can be zip-tied to the strain relief wing.

Figure 2-2 shows the drawing of P/N: 602-1196-10 strain relief wing.



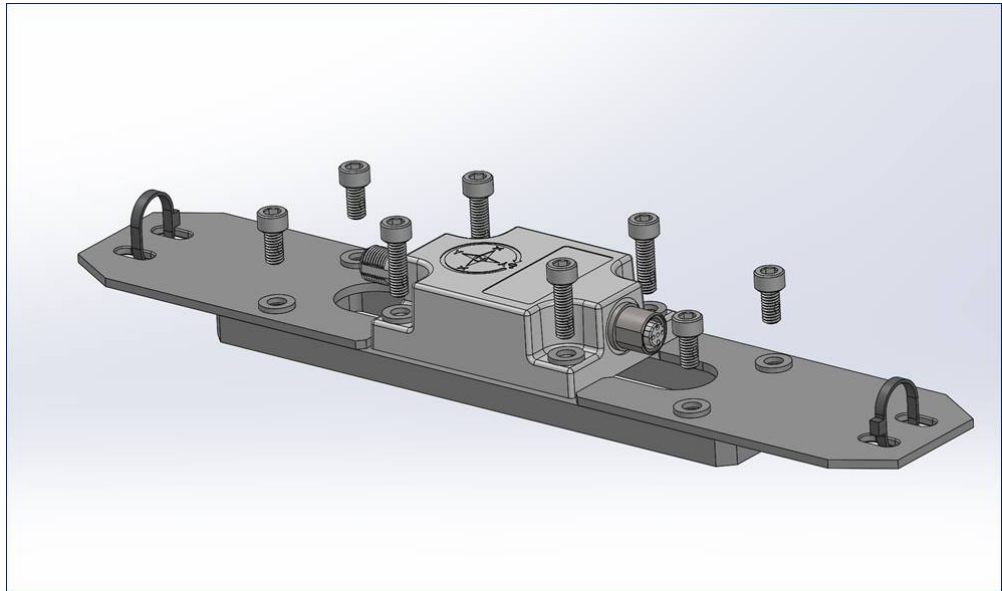
**Figure 2-2: P/N 602-1196-10 strain relief wing**

*Continued on next page*

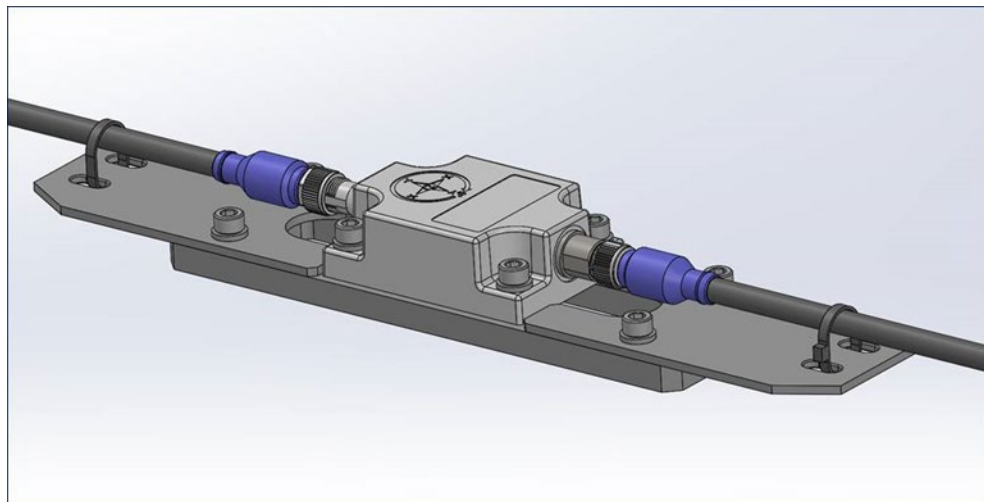
## GMS-1 Sensor Installation, Continued

### Brackets, continued

After the base bracket has been welded onto the machine, the GMS-1 sensor can be bolted onto the bracket with the provided 20mm M6x1mm screws.



**Figure 2-3: Base Bracket Screws**



**Figure:2-4: Bracket**

*Continued on next page*

*e*

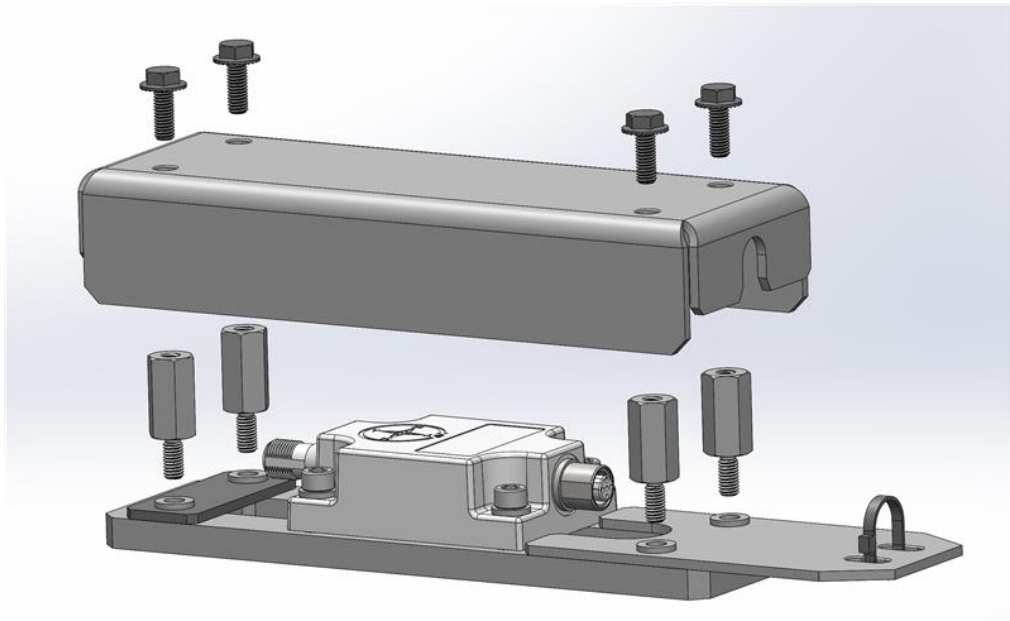
## GMS-1 Sensor Installation, Continued

---

### Brackets, continued

One strain relief plate and one spacer (P/N: 602-1197-10) is included for the blade. The spacer can be attached to the base bracket on the opposite side of the strain relief wing using the provided 14mm M6x1mm screws. See the following example.

A cover is added to the sensor bracket for protection.



**Figure 2-5: Strain Relief Plate and Spacer**

**Note:** The standoffs in the blade installation are used only because a cover is placed (not bolted) over the installation.

For the chassis, use the M6 screws instead of the standoffs, and bolt (P/N: 602-1195-10) the cover onto the installation.

---

*Continued on next page*

## GMS-1 Sensor Installation, Continued

---

### Sensor Placement

Place the horizontal sensor on the chassis and level to the dozer body. Place the label of the GMS-1 sensor either facing up or facing down.

The LED light can be placed facing left, right, up, or down. Take care to square the sensor so the LED faces one of these locations.

The vertical sensor must be placed on the blade. Place the label facing forward (toward the front of the machine) or backward (toward the cab).

The LED light can be placed to face up, down, left, or right. The base bracket should be welded onto the blade and the cover placed over the sensor. The coil cable is connected to this sensor.



**Figure 2-6: Horizontal Sensor and Chassis**

---

## Chapter 3: Installing the Sensor Junction Box

### Overview

---

**Introduction**      This chapter provides the information to install the sensor junction box in your dozer.

---

### Contents

Topic	See Page
Install the Sensor Junction Box	23

---

## Install the Sensor Junction Box


### Steps to install the sensor junction box

A CAN cable runs from the IronTwo (inside of the cab) to the sensor junction box. A second CAN cable runs from the sensor junction box to the sensor on the blade.

The sensor junction box protects the cable running from the IronTwo to junction box, so if the CAN cable connected to the dozer blade sensor becomes damaged, the cable running to the IronTwo does not need to be replaced.

To install the sensor junction box, follow the steps as detailed in Table 3-1: Install Sensor Junction Box.

**Table 3-1: Install Sensor Junction Box**


Step	Action
1	<p>Install the blade sensor junction box at the front area of the machine in a location suitable for cable wiring. Figure 3-1 shows the sensor junction box mag-mounted to the front of the dozer. The sensor junction box can also be welded or bolted onto the machine.</p>  <p><b>Figure 3-1: Sensor junction box mag-mounting</b></p>
2	<p>Install the blade sensor cable in a location that will not interfere with the blade movement.</p>

*Continued on next page*

## Install the Sensor Junction Box, Continued

Steps to install the sensor junction box, continued

**Table 3-1: Install Sensor Junction Box (continued)**

Step	Action
3	<p>Install a cable strain relief connection. Tie the wrap cable to either of the existing locations or install the P-Clamps.</p>  <p><b>Figure 3-2: Sensor Junction Box</b></p>
4	<p>Route the cable through the engine compartment toward the cab. Ensure the cable is clear of any moving engine parts and hot areas (i.e., the exhaust and turbo).</p>
5	<p>Route the cable in to connect to the IronTwo control box cable. We recommend installing cable wrap on any part of cable that may come in contact with wear locations or excessive heat.</p>
6	<p>Connect the blade sensor coil cable (P/N: 051-0413-10) from the blade sensor to sensor junction box, and ensure the cable is secured to avoid any machine pinch points.</p>



## Chapter 4: Installing the VR500 Antenna

### Overview

---

**Introduction** Chapter 4 provides all the information you need to install the VR500 antenna to your dozer.

---

### Contents

Topic	See Page
Install the VR500 Antenna	26

---

## Install the VR500 Antenna

**Overview** The VR500 antenna may be installed parallel or perpendicular to the centerline of the machine.

If installing the VR500 perpendicular to the centerline of the machine, place the primary antenna on the left-hand side of the machine and secondary on the right-hand side.

If installing the VR500 parallel to the centerline, install the primary antenna in the back and install the secondary antenna in front.

**Steps to install the VR500 antenna** To install the VR500 antenna, follow the steps as detailed in Table 4-1.

**Table 4-1: Install VR500 antenna**

Step	Action
1	Install the VR500 antenna onto the mounting bracket.
2	If welding to a surface plate, (Weld Plate Kit P/N: 710-0158-10), square it center and close to the centerline of cab.
3	<p>If using magnetic mounting (Mag Mount Kit P/N: 710-0157-10), remove the bottom plate and install the magnets directly on the cross bars.</p> <div style="border: 1px solid black; padding: 5px; margin-top: 10px;"> <p><b>IMPORTANT: If the antenna mount moves or the antenna location is changed, the calibration and measure-up must be repeated, or the machine accuracy will be inaccurate. We recommend permanently marking the exact location for future reference.</b></p> </div>

*Continued on next page*

## Install the VR500 Antenna, Continued

Steps to install  
the VR500  
antenna,  
continued

**Table 4-1: Install VR500 antenna (continued)**

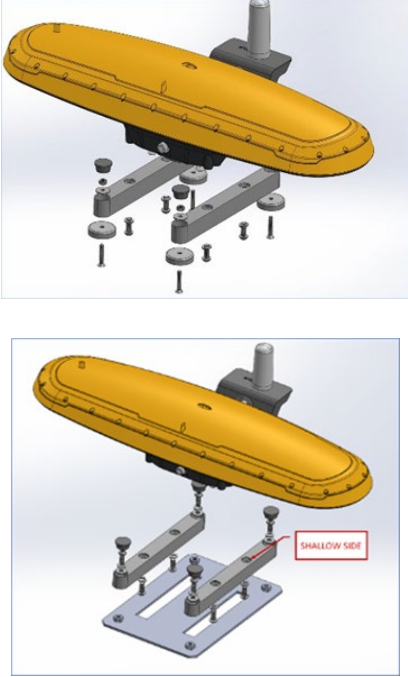
Step	Action														
4	<p>Figure 4-1 shows the VR500 mounting brackets. If you are using a weld-on mount, use the bottom plate.</p> <p>Do not use the bottom plate if you are using the magnetic mount.</p> <p><b>Table 4-1: Permanent mount (P/N: 710-0157-10)</b></p> <table> <tr> <th>Part Number</th><th>Description</th></tr> <tr> <td>602-1186-10</td><td>BRACKET, VR500 MC MOUNT</td></tr> <tr> <td>602-1185-10</td><td>PLATE, WELDED, VR500 MC MOUNT</td></tr> <tr> <td>681-1076-10</td><td>PLUG, LDPE, FOR 23.4mm DIA HOLE</td></tr> <tr> <td>675-1342-10</td><td>SCR, BUTTON HEAD, HEX, M8X1.25, 20MM, SS</td></tr> <tr> <td>678-1146-10</td><td>WSHR, FLT, 0.344" ID, 0.75" OD, SS 18-8</td></tr> <tr> <td>678-1145-10</td><td>WSHR, LCK, 8.5mm ID, 14.8mm OD, SS.18-8</td></tr> </table>	Part Number	Description	602-1186-10	BRACKET, VR500 MC MOUNT	602-1185-10	PLATE, WELDED, VR500 MC MOUNT	681-1076-10	PLUG, LDPE, FOR 23.4mm DIA HOLE	675-1342-10	SCR, BUTTON HEAD, HEX, M8X1.25, 20MM, SS	678-1146-10	WSHR, FLT, 0.344" ID, 0.75" OD, SS 18-8	678-1145-10	WSHR, LCK, 8.5mm ID, 14.8mm OD, SS.18-8
Part Number	Description														
602-1186-10	BRACKET, VR500 MC MOUNT														
602-1185-10	PLATE, WELDED, VR500 MC MOUNT														
681-1076-10	PLUG, LDPE, FOR 23.4mm DIA HOLE														
675-1342-10	SCR, BUTTON HEAD, HEX, M8X1.25, 20MM, SS														
678-1146-10	WSHR, FLT, 0.344" ID, 0.75" OD, SS 18-8														
678-1145-10	WSHR, LCK, 8.5mm ID, 14.8mm OD, SS.18-8														

*Continued on next page*

## Install the VR500 Antenna, Continued

Steps to install  
the VR500  
antenna,  
continued

**Table 4-1: Install VR500 antenna (continued)**

Step	Action												
4 (cont.)	 <p><b>Figure 4-1: VR500 mounting brackets</b></p> <p><b>Table 4-3: Magnet Mount: (P/N: 710-0158-10)</b></p> <table> <tr> <th>Part Number</th><th>Description</th></tr> <tr> <td>602-1186-10</td><td>BRACKET, VR500 MC MOUNT</td></tr> <tr> <td>681-1076-10</td><td>PLUG, LDPE, FOR 23.4mm DIA HOLE</td></tr> <tr> <td>675-1342-10</td><td>SCR, BUTTON HEAD, HEX, M8X1.25, 20MM, SS</td></tr> <tr> <td>678-1145-10</td><td>WSHR, LCK, 8.5mm ID, 14.8mm OD, SS.18-8</td></tr> <tr> <td>478-0020-10</td><td>MAGNET, BASE, ENCASED, NEODYMIUM, 1.75"OD, .375"THK</td></tr> </table>	Part Number	Description	602-1186-10	BRACKET, VR500 MC MOUNT	681-1076-10	PLUG, LDPE, FOR 23.4mm DIA HOLE	675-1342-10	SCR, BUTTON HEAD, HEX, M8X1.25, 20MM, SS	678-1145-10	WSHR, LCK, 8.5mm ID, 14.8mm OD, SS.18-8	478-0020-10	MAGNET, BASE, ENCASED, NEODYMIUM, 1.75"OD, .375"THK
Part Number	Description												
602-1186-10	BRACKET, VR500 MC MOUNT												
681-1076-10	PLUG, LDPE, FOR 23.4mm DIA HOLE												
675-1342-10	SCR, BUTTON HEAD, HEX, M8X1.25, 20MM, SS												
678-1145-10	WSHR, LCK, 8.5mm ID, 14.8mm OD, SS.18-8												
478-0020-10	MAGNET, BASE, ENCASED, NEODYMIUM, 1.75"OD, .375"THK												
5	Apply cable wrap on the cable (cable P/N: 051-0406-10) where the cable may be exposed to chaffing, rubbing, or high heat to extend the cable life.												

## Chapter 5: Installing the IronTwo Control Box

### Overview

---

**Introduction** This chapter provides information necessary to install the IronTwo to your GradeMetrix dozer.

---

### Contents

Topic	See Page
Install IronTwo Control Box	30
Install the Power Cable	32
Install Cable Routing	33


---

## Install IronTwo Control Box

### Steps to install IronTwo Control Box

To install the IronTwo Control Box, follow the steps as detailed in Table 5-1: Install IronTwo Control Box.

**Table 5-1: Install IronTwo Control Box**

Step	Action
1	<p>Determine an operator-acceptable location to mount the IronTwo control box.</p>  <p><b>Figure 5-1: IronTwo Control Box</b></p>
2	<p>Use either the U-Mount RAM mount, or the flush-mount RAM ball, to mount the IronTwo where the operator can operate the blade and see the guidance on the IronTwo console.</p>

*Continued on next page*

## Install IronTwo Control Box, Continued

Steps to install  
IronTwo Control  
Box, continued

**Table 5-1: Install IronTwo Control Box (continued)**

Step	Action												
3	<p>When installing the flush mount, determine how to install the RAM ball on the machine and use your own hardware. Hardware is provided to mount the RAM ball onto the back of the IronTwo.</p> <table><tr><th>Part Number</th><th>Description</th></tr><tr><td>604-0054-000</td><td>RAM MNT, 2.43 INCH BASE, 1.5 INCH BALL</td></tr><tr><td>675-1211-000#</td><td>SCR,SEMS-INT.TOOTH,10-32,1/2",PHIL,SS</td></tr></table> <p><b>Table 5-2: U-Mount Kit: P/N: 710-0149-10</b></p> <table><tr><th>Part Number</th><th>Description</th></tr><tr><td>604-0015-000#</td><td>ASSY,ARM.W/U-BOLT. BASE. AND. ROUND.BASE</td></tr><tr><td>675-1211-000#</td><td>SCR,SEMS-INT.TOOTH,10-32,1/2",PHIL,SS</td></tr></table>	Part Number	Description	604-0054-000	RAM MNT, 2.43 INCH BASE, 1.5 INCH BALL	675-1211-000#	SCR,SEMS-INT.TOOTH,10-32,1/2",PHIL,SS	Part Number	Description	604-0015-000#	ASSY,ARM.W/U-BOLT. BASE. AND. ROUND.BASE	675-1211-000#	SCR,SEMS-INT.TOOTH,10-32,1/2",PHIL,SS
Part Number	Description												
604-0054-000	RAM MNT, 2.43 INCH BASE, 1.5 INCH BALL												
675-1211-000#	SCR,SEMS-INT.TOOTH,10-32,1/2",PHIL,SS												
Part Number	Description												
604-0015-000#	ASSY,ARM.W/U-BOLT. BASE. AND. ROUND.BASE												
675-1211-000#	SCR,SEMS-INT.TOOTH,10-32,1/2",PHIL,SS												
4	<p>Make sure the operator can safely exit the machine. The IronTwo control box must not block or hinder access to any door of the cab.</p>												

## Install the Power Cable

---

**Steps to install the power cable** To install the power cable, follow the steps as detailed in Table 5-3: Install Power Cable.

**Table 5-3: Install Power Cable**

Step	Action
1	The IronTwo power cable comes in two sections. P/N: 050-0022-01 has a right-angle connector that connects to the power on the back of the IronTwo and connects to P/N: 050-0046-01.
2	Attach the positive (red) wire to a clean power source and the negative (black) to machine ground. The orange wire is ignition. Ground the ignition if it is not used. Else, connect the ignition to an ignition source.
3	Route the cable into the cab. Use cable wrap where the cable may wear through the insulation.

---




## Install Cable Routing

### Steps to install cable routing

To install the cable routing, follow the steps as detailed in Table 5-4: Install Cable Routing.

**Table 5-4: Install Cable Routing**

Step	Action
1	<p>Install Comm IronTwo Bulkhead cable (P/N: 051-0426-10) onto the back of IronTwo control box into the “COMM” connector.</p>  <p><b>Figure 5-2: IronTwo cable to VR500 Bulkhead</b></p>
2	<p>From inside the cab, route the VR500 data cable, (P/N: 051-0407-10) from the previously installed 5-pin bulkhead connector up to the IronTwo Control Box Bulkhead cable 6-pin Deutsch connector.</p>

### Power System

1. Power up the IronTwo control box.
2. Check the LEDs and the sensor to verify power and operation of components. The LEDs are located on the bottom side of VR500 for Power, GNSS, Heading, and Radio power.

## Chapter 6: GradeMetrix System

### Overview

---

**Introduction** This chapter provides information necessary to use the GradeMetrix System to measure and setup your equipment.

---

### Contents

Topic	See Page
Measure and Set Up Equipment	35
Configure Machine Measure	37
Set Up Sensor	40
Calibrate System	43
Quick Calibrate	45
3D Calibration	47
Verify Machine Accuracy	62
Save Machine Settings	65

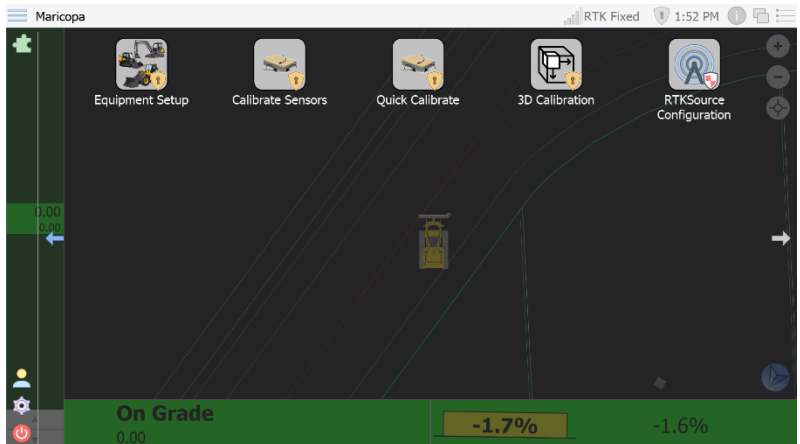
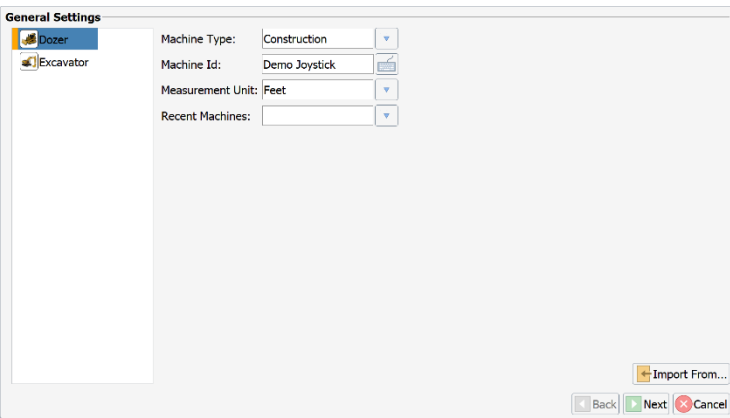
---

## Measure and Set Up Equipment

### Steps to measure and set up equipment

To measure and setup your equipment, follow the steps as detailed in Table 6-1: Measure and Set Up Equipment.

**Table 6-1: Measure and Set Up Equipment**

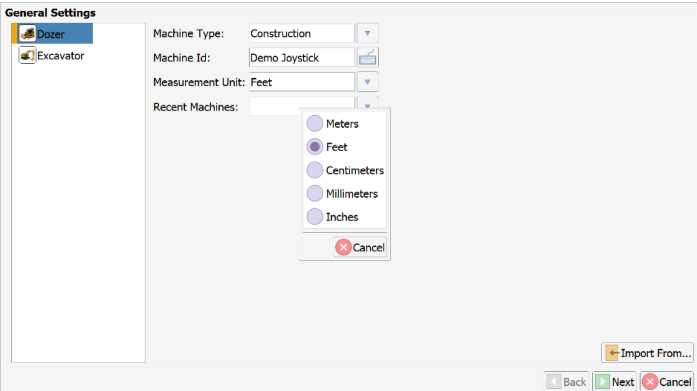
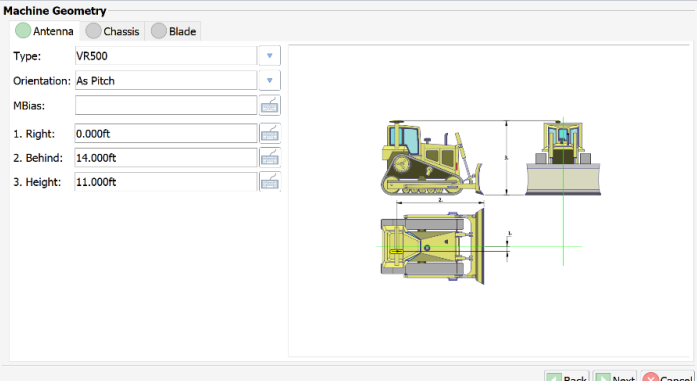
Step	Action
1	<p>Select <b>Equipment Setup</b>.</p> 
2	<p>Select <b>Dozer</b> in the <b>General Settings</b> screen.</p> 
3	Select <b>Machine Type</b> .

*Continued on next page*

## Measure and Set Up Equipment, Continued

Steps to  
measure and  
set up  
equipment,  
continued

**Table 6-1: Measure and Set Up Equipment (continued)**

Step	Action
4	<p>Assign a <b>Machine ID</b>.</p> <p><b>Note:</b> Your Machine ID should be a unique identifier that will identify this specific machine to your company.</p>
5	<p>Select the unit of measure. Click <b>NEXT</b>.</p> 
6	<p>Follow the screen directions for measuring the machine.</p> <p>Locate the three tabs across the top below <b>Machine Geometry</b> for machine measure configuration.</p> <ul style="list-style-type: none"> <li>• Antenna location</li> <li>• Body size</li> <li>• Blade size</li> </ul> 

## Configure Machine Measure

### Configure Machine Measure

To configure your machine measure, follow the steps as detailed in Table 6-2.

**Table 6-2: Configure machine measure**




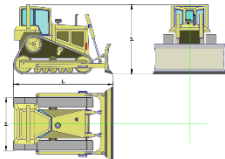



Step	Action										
1	<p>On the <b>Antenna</b> tab, select the type of antenna and receiver you are using. For dozer installations, select the VR500 receiver.</p> <table><tr><th>Field</th><th>Description</th></tr><tr><td>Pitch orientation</td><td>The VR500 orientation is parallel with the machine’s tracks and the arrow points in the direction of forward travel.</td></tr><tr><td>Roll orientation</td><td>Roll orientation is perpendicular to the machine’s tracks with the arrow pointing to the right side of machine.</td></tr><tr><td>MBias</td><td>This value will automatically be calculated during the 3D calibration and does not need to be manually typed in. MBias is the angular offset between the VR500’s heading and the machine’s heading. If the machine is facing due north (0 degrees) and the VR500 reads 5 degrees, the MBias is 5 degrees.</td></tr><tr><td>Right</td><td>This value is the distance of the primary antenna from the centerline of the machine. If the primary antenna is to the left of the centerline, this value is negative. <b>Note: You do not need to enter this value. It will be calculated automatically during the 3D calibration.</b></td></tr></table>	Field	Description	Pitch orientation	The VR500 orientation is parallel with the machine’s tracks and the arrow points in the direction of forward travel.	Roll orientation	Roll orientation is perpendicular to the machine’s tracks with the arrow pointing to the right side of machine.	MBias	This value will automatically be calculated during the 3D calibration and does not need to be manually typed in. MBias is the angular offset between the VR500’s heading and the machine’s heading. If the machine is facing due north (0 degrees) and the VR500 reads 5 degrees, the MBias is 5 degrees.	Right	This value is the distance of the primary antenna from the centerline of the machine. If the primary antenna is to the left of the centerline, this value is negative. <b>Note: You do not need to enter this value. It will be calculated automatically during the 3D calibration.</b>
Field	Description										
Pitch orientation	The VR500 orientation is parallel with the machine’s tracks and the arrow points in the direction of forward travel.										
Roll orientation	Roll orientation is perpendicular to the machine’s tracks with the arrow pointing to the right side of machine.										
MBias	This value will automatically be calculated during the 3D calibration and does not need to be manually typed in. MBias is the angular offset between the VR500’s heading and the machine’s heading. If the machine is facing due north (0 degrees) and the VR500 reads 5 degrees, the MBias is 5 degrees.										
Right	This value is the distance of the primary antenna from the centerline of the machine. If the primary antenna is to the left of the centerline, this value is negative. <b>Note: You do not need to enter this value. It will be calculated automatically during the 3D calibration.</b>										

*Continued on next page*

## Configure Machine Measure, Continued

Configure  
Machine  
Measure,  
continued

**Table 6-2: Configure machine measure (continued)**

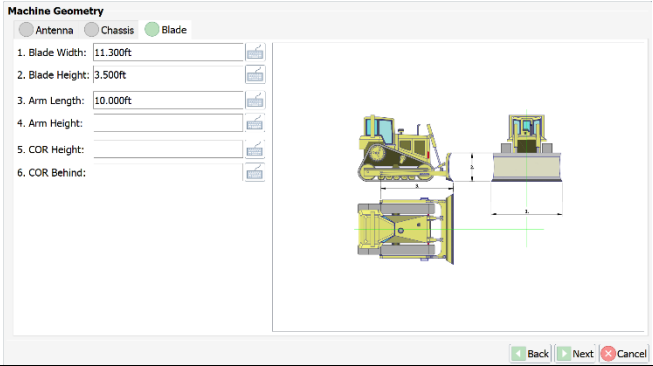
Step	Action						
1 (cont.)	<table><tr><th>Field</th><th>Description</th></tr><tr><td>Behind</td><td>This value is the distance from the primary antenna to the blade. <b>Note: You do not need to enter this value. It will be calculated automatically during the 3D calibration.</b></td></tr><tr><td>Height</td><td>This value is the height of the antenna above the tracks (measured to the lip of the VR500). <b>Note: You do not need to enter this value. It will be calculated automatically during the 3D calibration.</b></td></tr></table>	Field	Description	Behind	This value is the distance from the primary antenna to the blade. <b>Note: You do not need to enter this value. It will be calculated automatically during the 3D calibration.</b>	Height	This value is the height of the antenna above the tracks (measured to the lip of the VR500). <b>Note: You do not need to enter this value. It will be calculated automatically during the 3D calibration.</b>
Field	Description						
Behind	This value is the distance from the primary antenna to the blade. <b>Note: You do not need to enter this value. It will be calculated automatically during the 3D calibration.</b>						
Height	This value is the height of the antenna above the tracks (measured to the lip of the VR500). <b>Note: You do not need to enter this value. It will be calculated automatically during the 3D calibration.</b>						
2	<p>Click the <b>Chassis</b> tab. Type the body length, width, and height per the diagram below. These values can be approximate, as they are only used for graphics.</p> <div><div><p><b>Machine Geometry</b></p><p><input type="radio"/> Antenna <input checked="" type="radio"/> Chassis <input type="radio"/> Blade</p><p>1. Length: <input type="text" value="19.000ft"/> </p><p>2. Width: <input type="text" value="11.000ft"/> </p><p>3. Height: <input type="text" value="9.842ft"/> </p></div><div></div></div> <div><div> Back</div><div> Next</div><div> Cancel</div></div>						

*Continued on next page*

## Configure Machine Measure, Continued

Configure  
Machine  
Measure,  
continued

**Table 6-2: Configure machine measure (continued)**

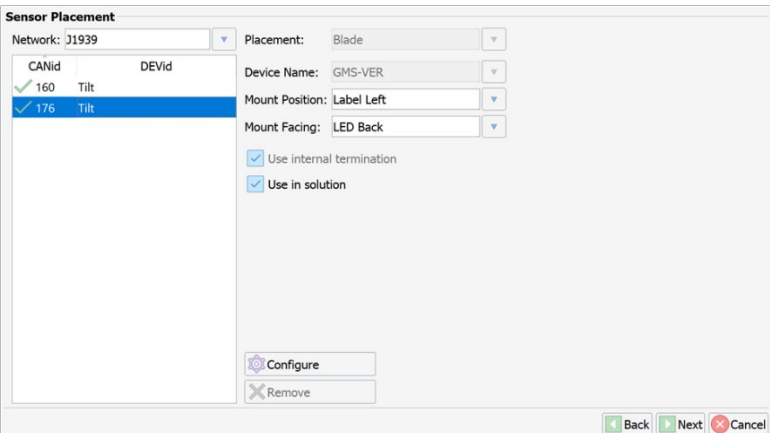
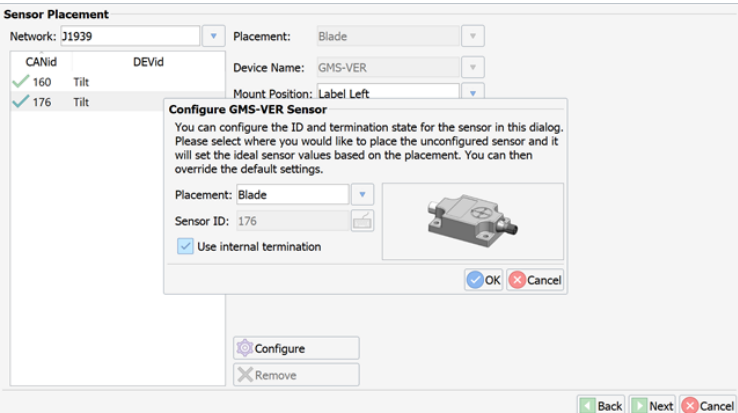
Step	Action
3	<p>Click the <b>Blade</b> tab. Type the blade width and height and the arm length. These values must be as accurate as possible.</p> 
4	<p>You must enter the Center of Rotation (COR) height and behind offsets.</p> <p>To do this, the Operator should roll the blade left and right to find the center of rotation of the blade. Find the point the blade rotates around.</p> <p>After locating the center of rotation, measure the height above the cutting edge and the distance behind the tip of the cutting edge.</p>

## Set Up Sensor

### Set up sensor

**Ta** After clicking **Next** in the screen above, you will see the **Sensor Placement** screen.

**Table 6-3: Set up sensor**

Step	Action
1	<p>Click <b>Sensor Network</b>. Set <b>Network</b> to <b>J1939</b>.</p> 
2	<p>Each sensor is unconfigured.</p> <p>Click the sensor name and click <b>Configure</b>. A dialogue window displays. Click the dropdown box next to <b>Placement</b>. If the sensor is on the blade, select <b>Blade</b>. If the sensor is on the chassis, select <b>Chassis</b>. For the blade sensor, check <b>Use internal termination</b>. Click <b>OK</b>.</p> 

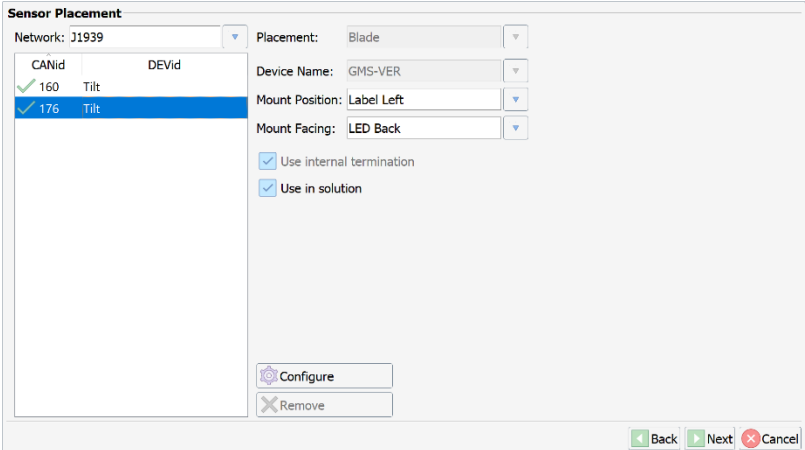
*Continued on next page*



## Set Up Sensor, Continued

Set up sensor,  
continued

**Table 6-3: Set up sensor (continued)**

Step	Action												
3	<p>Set up the orientation of the sensor. <b>Mount Position</b> refers to the direction of the label.</p> <p>For the chassis sensor:</p> <table border="1"> <thead> <tr> <th>If ...</th><th>Then ...</th></tr> </thead> <tbody> <tr> <td>the label is facing up</td><td>Set to <b>Label Up</b></td></tr> <tr> <td>the label is facing down</td><td>Set to <b>Label Down</b></td></tr> </tbody> </table> <p>For the blade sensor:</p> <table border="1"> <thead> <tr> <th>If ...</th><th>Then ...</th></tr> </thead> <tbody> <tr> <td>the label is facing forward</td><td>Set to <b>Label Forward</b></td></tr> <tr> <td>The label is facing toward the cab</td><td>Set to <b>Label Back</b></td></tr> </tbody> </table> 	If ...	Then ...	the label is facing up	Set to <b>Label Up</b>	the label is facing down	Set to <b>Label Down</b>	If ...	Then ...	the label is facing forward	Set to <b>Label Forward</b>	The label is facing toward the cab	Set to <b>Label Back</b>
If ...	Then ...												
the label is facing up	Set to <b>Label Up</b>												
the label is facing down	Set to <b>Label Down</b>												
If ...	Then ...												
the label is facing forward	Set to <b>Label Forward</b>												
The label is facing toward the cab	Set to <b>Label Back</b>												

*Continued on next page*

## Set Up Sensor, Continued

---

Set up sensor,  
continued

**Table 6-3: Set up sensor (continued)**

Step	Action
4	If <b>Mount Facing</b> is selected, a pull-down screen displays.  You can select from the listed options for the blade sensor's arrow orientation.
5	Click <b>FINISH</b> .

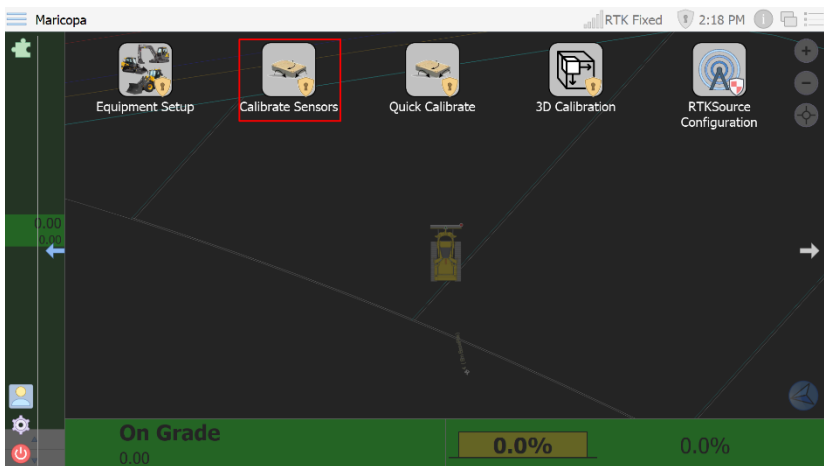
---

## Calibrate System

### Calibrate system

To calibrate the system, follow the steps as detailed in Table 6-4: Calibrate System. The dozer should be outside with a clear view of the sky and no obstructions. Use this method to calibrate all the sensors using GradeMetrix.

**Table 6-4: Calibrate System**

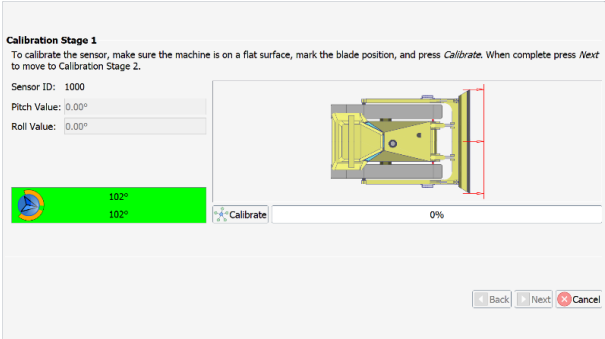
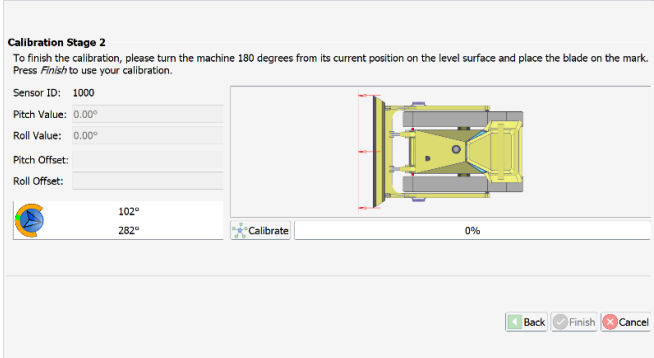
Step	Action
1	<p>Click <b>Calibrate Sensors</b> and follow instructions.</p> <p>It is recommended to use a firm, flat surface during the calibration process.</p> 

*Continued on next page*

## Calibrate System, Continued

Calibrate system,  
continued

**Table 6-4: Calibrate System (continued)**

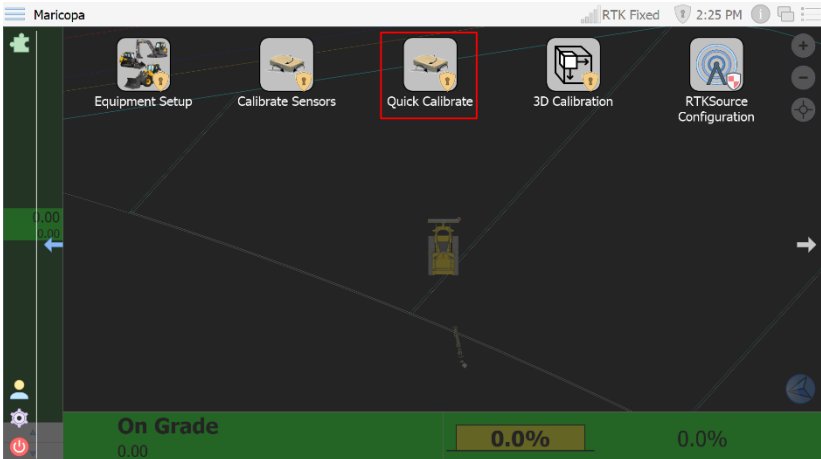
Step	Action
2	<p>Follow the instructions on the screen. Locate a firm, flat level surface twice the length of the machine. Place the machine so the blade sits in the middle as shown below.</p> <p>Mark the blade position on ground. Mark both the cutting edges.</p> <p>Select <b>Calibrate</b>. Click <b>Next</b>.</p> 
3	<p>Follow the instructions on the screen.</p> <p>Carefully lift the blade so as to not damage the marks and track the machine to rotate 180 degrees and carefully place the blade to align with the mark made at the last step</p> <p>Select <b>Calibrate</b>. Select <b>Finish</b>.</p> 

## Quick Calibrate

### Steps to quick calibrate

To quick calibrate the system, follow the steps as detailed in Table 6-5: Quick Calibrate.

**Table 6-5: Quick Calibrate**

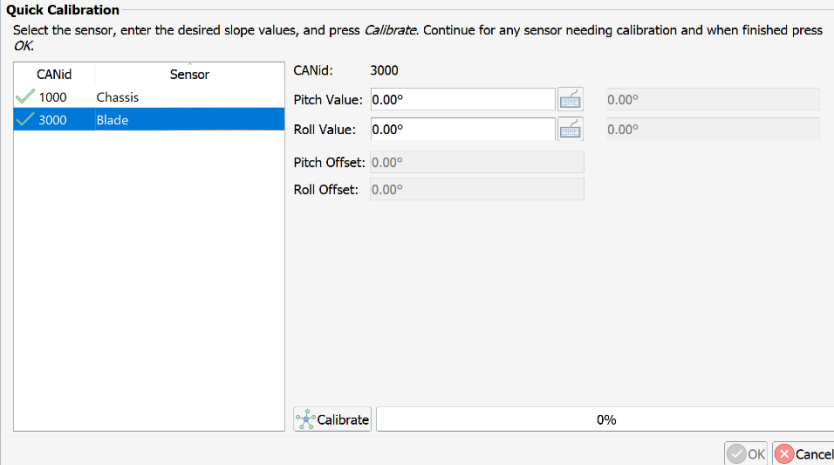
Step	Action
1	<p>Click <b>Quick Calibrate</b>.</p> <p>This method is a direct setting of a single sensor and works well with a calibrated 'Smart Level' tool.</p> 

*Continued on next page*

## Quick Calibrate, Continued

Steps to quick  
calibrate,  
continued

**Table 6-5: Quick Calibrate (continued)**

Step	Action
2	<p>Select the sensor to be calibrated.</p> <p>Enter the 'Smart Level' readings of the pitch and roll values for each sensor.</p> <p>Select <b>Calibrate</b>.</p> 
3	Click <b>OK</b> when you are finished calibrating all the sensors.


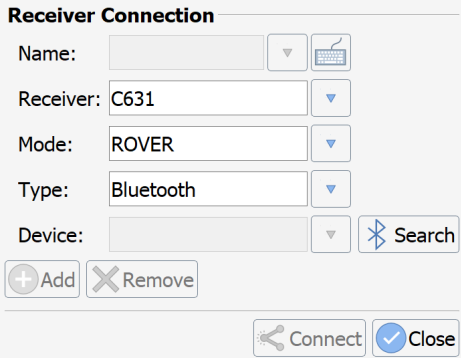
## 3D Calibration

**3D Calibration** Before proceeding with the 3D calibration, ensure the chassis and blade sensors are calibrated. If you have a six-way blade, make sure the blade is square. Face the machine **North**.

The VR500 on the dozer and the C631 rover must be RTK Fixed. Make sure the C631, connected to SiteMetrix™ Grade, is running the same projection as GradeMetrix. To check if the C631 is in the same datum, set it next to the primary antenna of the VR500 enclosure. Verify the readings are close between the two. If the projection is incorrect, the northing and easting will show obvious errors.

To calibrate a GradeMetrix Dozer, use SiteMetrix Grade.

**Table 6-6: SiteMetrix Grade Points**





Step	Action
1	<p>Click the <b>Bluetooth</b> icon on the top-right of the screen.</p>  <p>A dialogue window displays. Click <b>Search</b> to search for Bluetooth devices.</p> 

*Continued on next page*

## 3D Calibration, Continued

3D Calibration,  
continued

**Table 6-6: SiteMetrix Grade Points (continued)**

Step	Action
2	<p>Click <b>Search</b> to search for the receiver. The Bluetooth ID is the serial number. There is no Bluetooth pin. Set <b>Mode</b> to either <b>Rover</b>, <b>Base</b>, or <b>Static</b>.</p> <p>Under <b>Name</b>, use the option to name the C631 as “base” or “rover”, rather than using the serial number.</p> <p>Click <b>Connect</b>.</p> <p>After connecting to the rover, configure the RTK. Go to the menu, scroll to the right, and click <b>RTKSource</b>.</p> <p>SiteMetrix Grade can receive RTK over NTRIP and use the internal UHF radio or an external UHF radio.</p>
3	<p>If using NTRIP, you can use the data collector’s internet (if internal cellular modem or WiFi) or the C631’s internal GSM modem. To setup click <b>Settings</b>.</p> <div data-bbox="574 1129 1305 1575"> <p><b>NTRIP Settings</b></p> <p>NTRIP Client: <input type="text" value="GradeMetrix"/> </p> <p>APN Name: <input type="text"/> </p> <p>APN Username: <input type="text"/> </p> <p>APN Password: <input type="text"/> </p> </div>

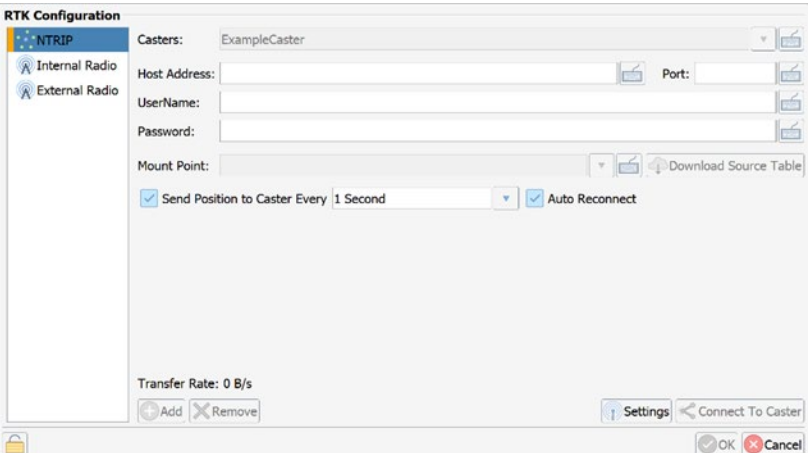
*Continued on next page*



## 3D Calibration, Continued

3D Calibration,  
continued

**Table 6-6: SiteMetrix Grade Points (continued)**

Step	Action
4	<p>If the NTRIP Client is set to <b>GradeMetrix</b>, the data collector's internet will be used to access the NTRIP caster and the RTK messages will transfer back to the C631 via Bluetooth.</p> <p>If the NTRIP Client is set to <b>Receiver</b>, the C631's internal modem will be used.</p> <p>Type the <b>APN Name</b>, <b>Username</b>, and <b>Password</b>.</p> <p>Type a <b>Caster</b> name. You can add multiple NTRIP casters to SiteMetrix Grade (all saved in a database).</p> <p>Type the <b>IP address/DNS</b>, <b>Port</b>, <b>Username</b>, and <b>Password</b>. Click <b>Download Source Table</b>.</p> 

*Continued on next page*

## 3D Calibration, Continued

3D Calibration,  
continued

**Table 6-6: SiteMetrix Grade Points (continued)**

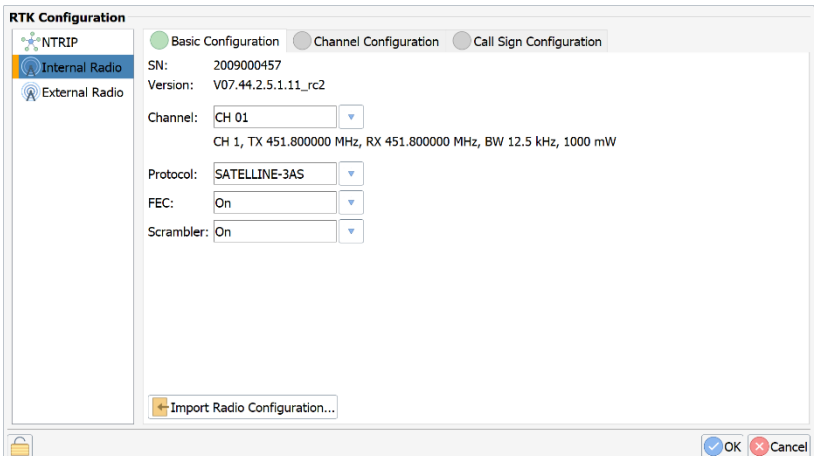
Step	Action
5	<p>Select the correct mount point. If using a VRS network (or the nearest base station), click <b>Send Position To Caster Every</b> and select an interval for your position to send to the caster.</p> <p>Click <b>Auto Reconnect</b> to ensure that the software reconnects to the NTRIP caster every time it opens or if internet is lost and re-gained. Click <b>OK</b>.</p> <div><b>Note:</b> After clicking <b>OK</b>, the NTRIP client is the only source of RTK (even if the internal UHF radio is configured). If you wish to switch to a configured internal UHF radio, go to <b>RTKSource Configure</b>, click <b>Internal Radio</b>, and click <b>OK</b>.</div>

*Continued on next page*

## 3D Calibration, Continued

3D Calibration,  
continued

**Table 6-6: SiteMetrix Grade Points (continued)**

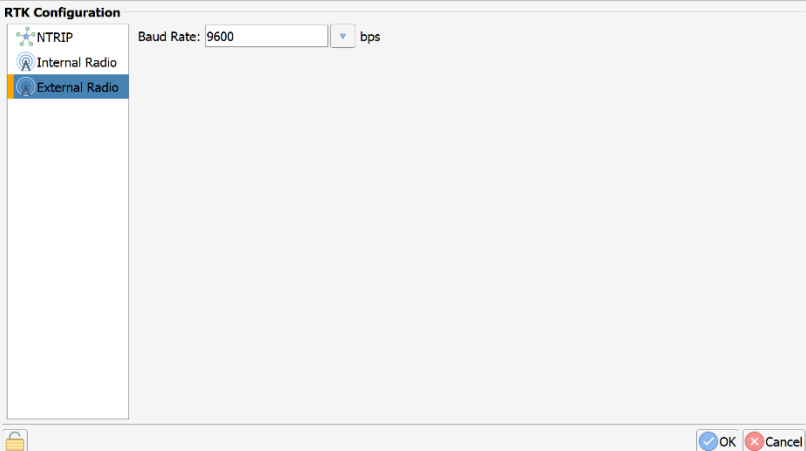

Step	Action
6	<p>Alternatively, you can use the <b>Internal Radio</b>.</p> <p>Click the <b>Internal Radio</b> tab. If you have the correct administrative settings, you can enter channels using <b>Channel Configuration</b>.</p> <p><b>Warning: You are responsible for verifying which frequencies and bandwidths can be set up for your region.</b></p> <p>Select the <b>channel</b>, <b>protocol</b>, <b>FEC</b> (if applicable), and scrambling (if applicable).</p> <p>Click <b>OK</b>.</p> <div style="border: 1px solid black; padding: 5px; margin-top: 10px;"> <p><b>Note:</b> After you click <b>OK</b>, the internal UHF radio is the primary source of RTK (even if the NTRIP client is configured) the receiver will use the radio. If you wish to switch to a configured the NTRIP client, go to <b>RTKSource Configure</b>, click <b>NTRIP</b>, and click <b>OK</b>.</p> </div> 

*Continued on next page*

## 3D Calibration, Continued

3D Calibration,  
continued

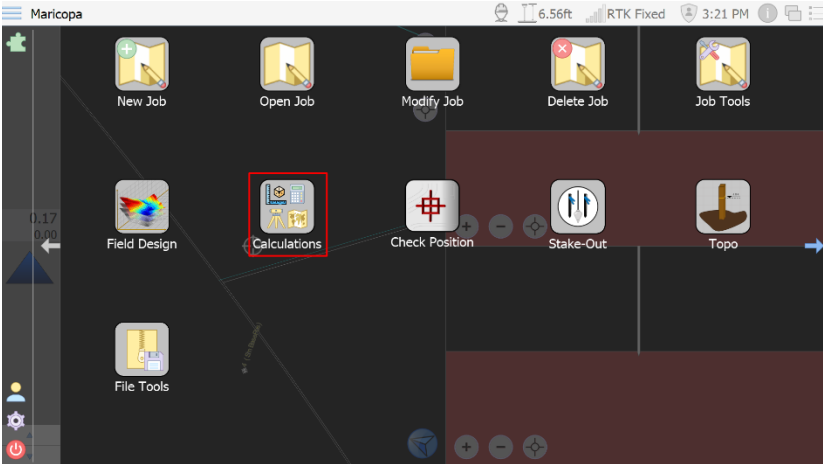
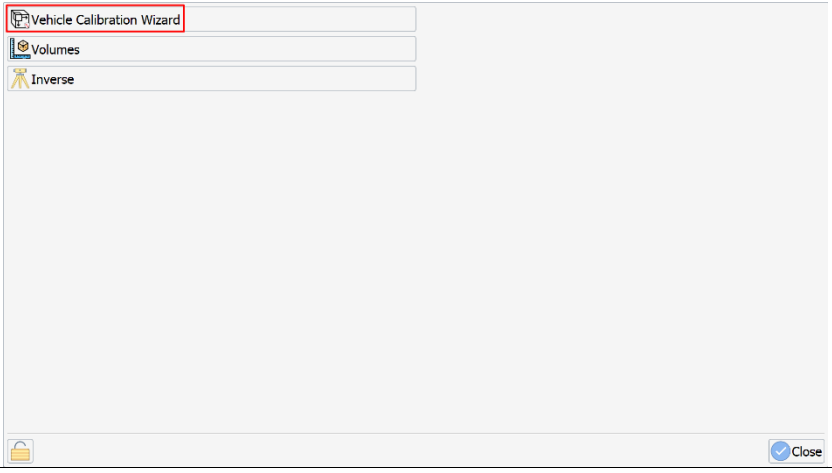
**Table 6-6: SiteMetrix Grade Points (continued)**

Step	Action
7	<p>Finally, you can select an <b>External Radio</b>.</p> <p>Click <b>External Radio</b>. SiteMetrix Grade does not support the configuration of an external radio, but you can set the baud rate of the serial port of the C631.</p> <p>On the bottom of the C631 are two Lemo connectors. One connector has 5 pins for an external radio, and the other has 7 pins.</p> 
8	<p>Verify the antenna height is correct.</p> 

*Continued on next page*

## 3D Calibration, Continued

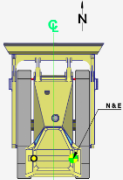
3D Calibration, continued **Table 6-6: SiteMetrix Grade Points (continued)**

Step	Action
9	<p>Go to the main menu. Click <b>Calculations</b>.</p> 
10	<p>Click <b>Vehicle Calibration Wizard</b>.</p> 

*Continued on next page*

## 3D Calibration, Continued

3D Calibration, continued **Table 6-6: SiteMetrix Grade Points (continued)**



Step	Action
11	<p><b>Select Dozer.</b></p> <div data-bbox="581 512 1399 961"> <p><b>Start 3D Calibration Measurement Wizard</b></p> <p>This wizard will step you through the process of measuring the vehicle for use as input for the GradeMetrix 3D Calibration wizard. You may cancel the process at any time and can backup to re-measure any of the points.</p> <p>Continue wizard for: <input type="text" value="Dozer"/></p> <ul style="list-style-type: none"> <li>• Before measuring, please make sure the mapping, localization, the geoid shift file, and the horizontal shift file for the current job are configured and working with the base station.</li> <li>• All measurements are sampled and averaged to give the best result. Remember to keep your rod vertical and still during the sampling process.</li> <li>• Make sure you square your blade before measuring.</li> </ul> <p>Back Next Cancel</p> </div>
12	<p><b>It is not necessary to measure the secondary antenna position when using a VR500. Click <b>Next</b>.</b></p> <div data-bbox="581 1089 1399 1539"> <p><b>Measure Second Antenna Position (step 1)</b></p> <p>Measuring the second antenna position is optional. It is strongly recommended to measure on machines using the VR1000 vector receiver. Leaving the excavator facing <b>North</b> and the blade resting on the ground, measure the <b>second antenna</b> position. Once measured, you can edit the northing and easting in the fields provided.</p> <p>Antenna Northing: <input type="text"/></p> <p>Antenna Easting: <input type="text"/></p> <p>Antenna Height: <input type="text"/></p>  <p>Record 0%</p> <p>Back Next Cancel</p> </div>

*Continued on next page*

## 3D Calibration, Continued

3D Calibration,  
continued

**Table 6-6: SiteMetrix Grade Points (continued)**





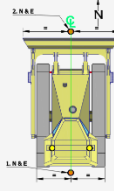
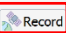
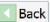
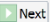

Step	Action
13	<p>Measure the GNSS position at the rear of the machine in the center.</p>  <p>Click <b>Record</b> to measure the point.</p> <div data-bbox="578 1360 1284 1749"> <p><b>Measure Rear Baseline Position (step 2)</b></p> <p>Leaving the dozer facing <b>North</b> and the blade resting on the ground, measure the <b>center of the body at the rear</b>. Once measured, you can edit the northing and easting in the fields provided.</p> <p>Baseline Northing: 50559.216ft <input type="text"/></p> <p>Baseline Easting: 60833.270ft <input type="text"/></p> <p>Baseline Elev: 502.545ft <input type="text"/></p>  <p><input type="button" value="Record"/> <span style="float: right;">100%</span></p> <p style="text-align: right;"><input type="button" value="Back"/> <input type="button" value="Next"/> <input type="button" value="Cancel"/></p> </div>

*Continued on next page*

## 3D Calibration, Continued

3D Calibration,  
continued

**Table 6-6: SiteMetrix Grade Points (continued)**

Step	Action
14	<p>To measure the center of the blade, pull a tape to find the correct center of the blade.</p>  <p>Click <b>Record</b> to measure the point.</p> <div data-bbox="578 1108 1401 1564"> <p><b>Measure Front Baseline Position (step 3)</b>          Leaving the dozer facing <b>North</b> and the blade resting on the ground, measure the <b>center of the blade</b>. Once measured, you can edit the northing and easting in the fields provided.</p> <p>Baseline Northing: <input type="text" value="50579.268ft"/> </p> <p>Baseline Easting: <input type="text" value="60833.571ft"/> </p> <p>Baseline Elev: <input type="text" value="502.546ft"/> </p>  <p> <span>100%</span>   </p> </div>


*Continued on next page*



## 3D Calibration, Continued

3D Calibration,  
continued

**Table 6-6: SiteMetrix Grade Points (continued)**

Step	Action
15	<p>Measure the left blade tip.</p>  <p>Click <b>Record</b> to measure the point.</p> <div data-bbox="578 1312 1398 1770"> <p><b>Measure Left Lateral Position (step 4)</b>          Leaving the dozer facing <b>North</b> and the blade resting on the ground, measure the <b>left side of the blade</b>. Once measured, you can edit the northing and easting in the fields provided.</p> <p>Lateral Northing: 50579.159ft <input type="text"/></p> <p>Lateral Easting: 60829.335ft <input type="text"/></p> <p>Lateral Elev: 502.655ft <input type="text"/></p>  <p><b>Record</b> 100%</p> <p>Back Next Cancel</p> </div>

*Continued on next page*

## 3D Calibration, Continued

3D Calibration,  
continued


**Table 6-6: SiteMetrix Grade Points (continued)**

Step	Action
16	<p>Measure the right blade tip.</p> 

*Continued on next page*

## 3D Calibration, Continued

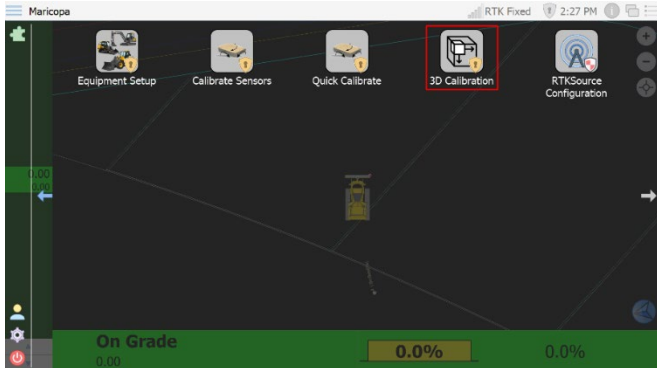
3D Calibration, continued **Table 6-6: SiteMetrix Grade Points (continued)**

Step	Action																														
17	<p>Click <b>Record</b> to measure the point.</p> <div><p><b>Measure Right Lateral Position (step 5)</b></p><p>Leaving the dozer facing <b>North</b> and the blade resting on the ground, measure the <b>right side of the blade</b>. Once measured, you can edit the northing and easting in the fields provided.</p><div><div>Right Bucket Pin Northing: 50559.204ft</div><div>Right Bucket Pin Easting: 60838.319ft</div><div>Right Bucket Pin Elev: 502.543ft</div></div><div></div><div><div><div>Record</div><div>100%</div></div><div><div>Back</div><div>Next</div><div>Cancel</div></div></div></div>																														
18	<p>A summary of all points recorded is provided. Click <b>Finish</b>.</p> <p>To save the file, insert a USB thumb drive to your HT20 tablet and save the file.</p> <div><p><b>Measurement Summary</b></p><p>These are the measurements to finish the 3D calibration for GradeMetrix. You can import the output of this tool directly into GradeMetrix. Press <i>Finish</i> to write the measurements to a file.</p><table><tr><th></th><th>Tag</th><th>Northing</th><th>Easting</th><th>Height</th></tr><tr><td>2nd Antenna</td><td>AP</td><td></td><td></td><td></td></tr><tr><td>Chassis Center</td><td>CL1</td><td>50559.216ft</td><td>60833.270ft</td><td>502.545ft</td></tr><tr><td>Blade Center</td><td>CL2</td><td>50579.268ft</td><td>60833.571ft</td><td>502.546ft</td></tr><tr><td>Blade Left</td><td>BL</td><td>50579.159ft</td><td>60829.335ft</td><td>502.655ft</td></tr><tr><td>Blade Right</td><td>BR</td><td>50559.204ft</td><td>60838.319ft</td><td>502.543ft</td></tr></table><div><div>Back</div><div>Finish</div><div>Cancel</div></div></div>		Tag	Northing	Easting	Height	2nd Antenna	AP				Chassis Center	CL1	50559.216ft	60833.270ft	502.545ft	Blade Center	CL2	50579.268ft	60833.571ft	502.546ft	Blade Left	BL	50579.159ft	60829.335ft	502.655ft	Blade Right	BR	50559.204ft	60838.319ft	502.543ft
	Tag	Northing	Easting	Height																											
2nd Antenna	AP																														
Chassis Center	CL1	50559.216ft	60833.270ft	502.545ft																											
Blade Center	CL2	50579.268ft	60833.571ft	502.546ft																											
Blade Left	BL	50579.159ft	60829.335ft	502.655ft																											
Blade Right	BR	50559.204ft	60838.319ft	502.543ft																											

*Continued on next page*

## 3D Calibration, Continued

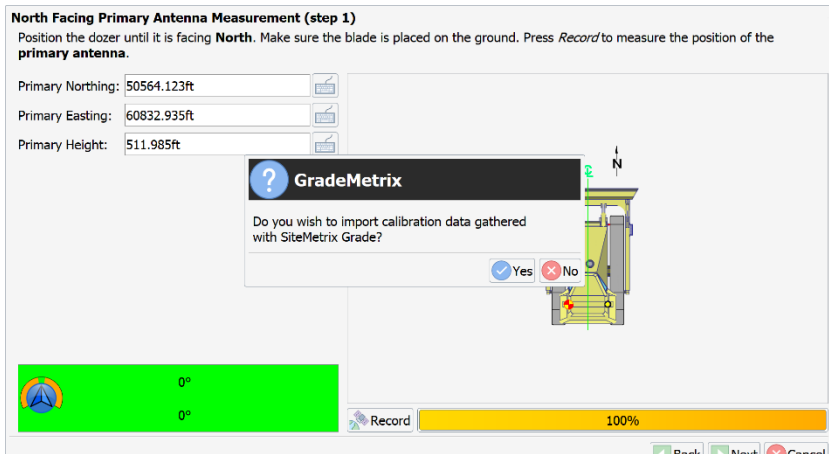
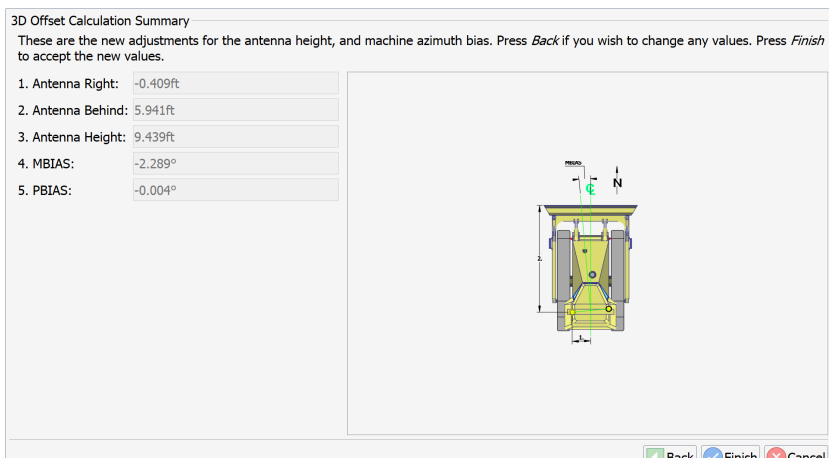
**3D Calibration, continued**      **Table 6-6: SiteMetrix Grade Points (continued)**

Step	Action
19	<p>Return to the GradeMetrix dozer. Click the <b>3D Calibration</b> icon in GradeMetrix dozer.</p> 
20	<p>Position the machine facing North and click <b>Record</b>.</p> <div> <p><b>North Facing Primary Antenna Measurement (step 1)</b></p> <p>Position the dozer until it is facing <b>North</b>. Make sure the blade is placed on the ground. Press <b>Record</b> to measure the position of the <b>primary antenna</b>.</p> <p>Primary Northing: 1,000.023ft</p> <p>Primary Easting: 2,000.074ft</p> <p>Primary Height: 317.012ft</p> <p>0°</p> <p>0°</p> <p>Record 0%</p> <p>Back Next Cancel</p> </div> <div> <p><b>North Facing Primary Antenna Measurement (step 1)</b></p> <p>Position the dozer until it is facing <b>North</b>. Make sure the blade is placed on the ground. Press <b>Record</b> to measure the position of the <b>primary antenna</b>.</p> <p>Primary Northing: 1,000.066ft</p> <p>Primary Easting: 1,999.988ft</p> <p>Primary Height: 317.078ft</p> <p>0°</p> <p>0°</p> <p>Record 100%</p> <p>Back Next Cancel</p> </div>

*Continued on next page*

## 3D Calibration, Continued

3D Calibration, continued **Table 6-6: SiteMetrix Grade Points (continued)**

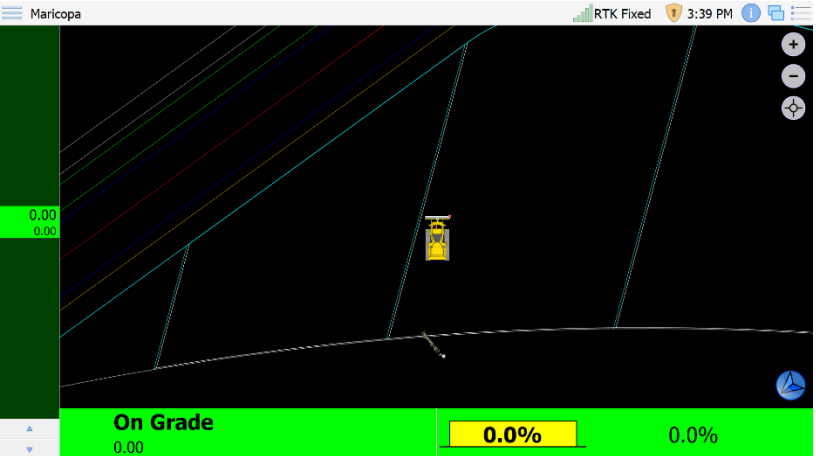
Step	Action
21	<p>A prompt displays to load your file from SiteMetrix Grade. Click <b>Yes</b>.</p> 
22	<p>The 3D Calibration Summary displays all of your primary antenna offsets. Click <b>Finish</b>.</p> 

## Verify Machine Accuracy

### Verify machine accuracy

To verify the accuracy of the machine, follow the steps as detailed in Table 6-7: Verify Machine Accuracy.

**Table 6-7: Verify Machine Accuracy**

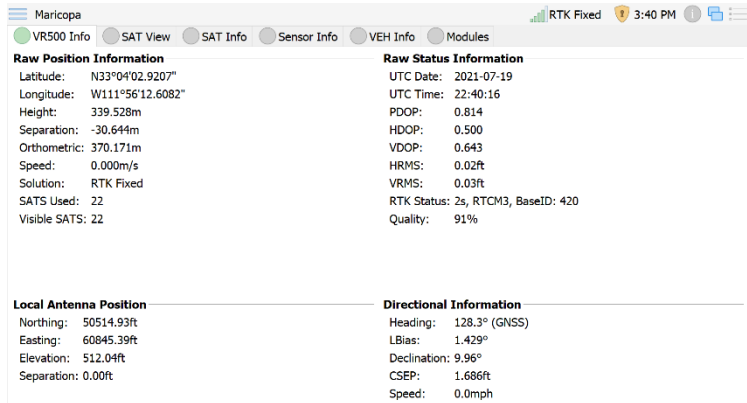
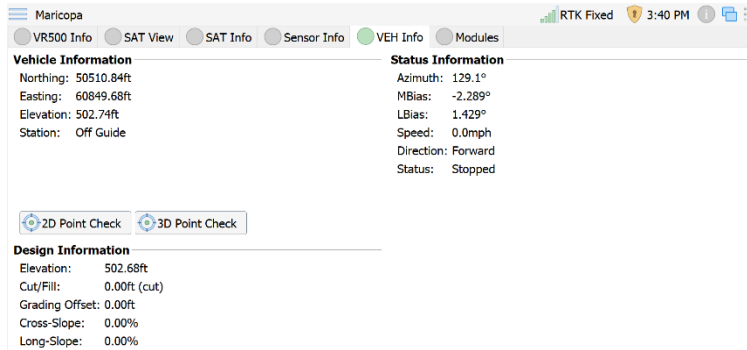
Step	Action
1	<p>From the main operational screen, select the “folder” icon in the upper-right corner of the screen.</p> 

*Continued on next page*

## Verify Machine Accuracy, Continued

Verify machine accuracy, continued

**Table 6-7: Verify Machine Accuracy (continued)**

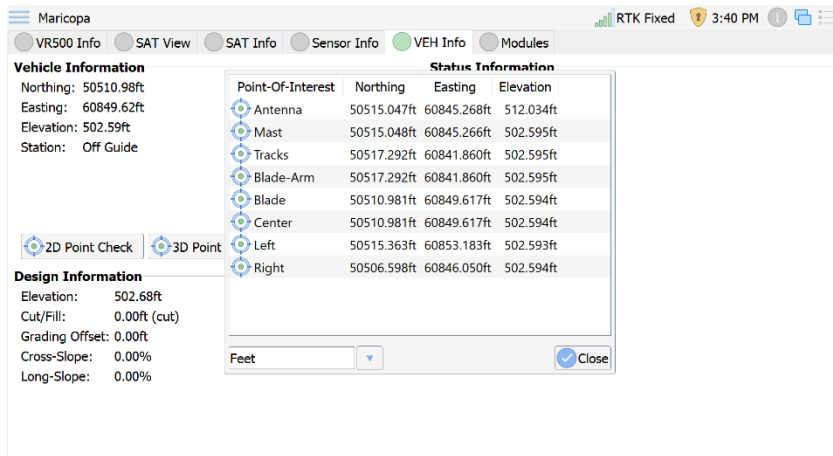
Step	Action
2	<p>Verify you have an RTK Fixed solution before proceeding.</p>  <p>The screenshot shows the Maricopa software interface with the 'VEH Info' tab selected. The status bar at the top indicates 'RTK Fixed' with a green signal icon and the time '3:40 PM'. The main display is divided into four sections: 'Raw Position Information', 'Raw Status Information', 'Local Antenna Position', and 'Directional Information'. The 'Raw Position Information' section lists coordinates (Latitude: N33°04'02.9207", Longitude: W111°56'12.6082", Height: 339.528m, Separation: -30.644m, Orthometric: 370.171m, Speed: 0.000m/s, Solution: RTK Fixed, SATS Used: 22, Visible SATS: 22). The 'Raw Status Information' section lists UTC Date: 2021-07-19, UTC Time: 22:40:16, PDOP: 0.814, HDOP: 0.500, VDOP: 0.643, HRMS: 0.02ft, VRMS: 0.03ft, RTK Status: 2s, RTCM3, BaseID: 420, and Quality: 91%. The 'Local Antenna Position' section lists Northing: 50514.93ft, Easting: 60845.39ft, Elevation: 512.04ft, and Separation: 0.00ft. The 'Directional Information' section lists Heading: 128.3° (GNSS), LBias: 1.429°, Declination: 9.96°, CSEP: 1.686ft, and Speed: 0.0mph.</p>
3	<p>Select the VEH (Vehicle) tab to verify the blade accuracy.</p>  <p>The screenshot shows the Maricopa software interface with the 'VEH Info' tab selected. The status bar at the top indicates 'RTK Fixed' with a green signal icon and the time '3:40 PM'. The main display is divided into three sections: 'Vehicle Information', 'Status Information', and 'Design Information'. The 'Vehicle Information' section lists Northing: 50510.84ft, Easting: 60849.68ft, Elevation: 502.74ft, and Station: Off Guide. The 'Status Information' section lists Azimuth: 129.1°, MBias: -2.289°, LBias: 1.429°, Speed: 0.0mph, Direction: Forward, and Status: Stopped. The 'Design Information' section lists Elevation: 502.68ft, Cut/Fill: 0.00ft (cut), Grading Offset: 0.00ft, Cross-Slope: 0.00%, and Long-Slope: 0.00%. There are also buttons for '2D Point Check' and '3D Point Check'.</p>

*Continued on next page*

## Verify Machine Accuracy, Continued

Verify machine accuracy, continued

**Table 6-7: Verify Machine Accuracy (continued)**

Step	Action																																				
4	<p>Select <b>3D Point Check</b> to check the accuracy at multiple locations. Use a rover to verify accuracy at left blade tip, right blade tip, and center blade.</p>  <p>The screenshot shows the Hemisphere software interface. At the top, there are tabs for VR500 Info, SAT View, SAT Info, Sensor Info, VEH Info (selected), and Modules. Below the tabs, there are three main sections: Vehicle Information, Status Information, and Design Information. The Vehicle Information section shows Northing: 50510.98ft, Easting: 60849.62ft, Elevation: 502.59ft, and Station: Off Guide. The Status Information section shows a table of Point-Of-Interest data. The Design Information section shows Elevation: 502.68ft, Cut/Fill: 0.00ft (cut), Grading Offset: 0.00ft, Cross-Slope: 0.00%, and Long-Slope: 0.00%. The 3D Point Check menu is open, showing options for Antenna, Mast, Tracks, Blade-Arm, Blade, Center, Left, and Right. The table of Point-Of-Interest data is as follows:</p> <table><thead><tr><th>Point-Of-Interest</th><th>Northing</th><th>Easting</th><th>Elevation</th></tr></thead><tbody><tr><td>Antenna</td><td>50515.047ft</td><td>60845.268ft</td><td>512.034ft</td></tr><tr><td>Mast</td><td>50515.048ft</td><td>60845.266ft</td><td>502.595ft</td></tr><tr><td>Tracks</td><td>50517.292ft</td><td>60841.860ft</td><td>502.595ft</td></tr><tr><td>Blade-Arm</td><td>50517.292ft</td><td>60841.860ft</td><td>502.595ft</td></tr><tr><td>Blade</td><td>50510.981ft</td><td>60849.617ft</td><td>502.594ft</td></tr><tr><td>Center</td><td>50510.981ft</td><td>60849.617ft</td><td>502.594ft</td></tr><tr><td>Left</td><td>50515.363ft</td><td>60853.183ft</td><td>502.593ft</td></tr><tr><td>Right</td><td>50506.598ft</td><td>60846.050ft</td><td>502.594ft</td></tr></tbody></table>	Point-Of-Interest	Northing	Easting	Elevation	Antenna	50515.047ft	60845.268ft	512.034ft	Mast	50515.048ft	60845.266ft	502.595ft	Tracks	50517.292ft	60841.860ft	502.595ft	Blade-Arm	50517.292ft	60841.860ft	502.595ft	Blade	50510.981ft	60849.617ft	502.594ft	Center	50510.981ft	60849.617ft	502.594ft	Left	50515.363ft	60853.183ft	502.593ft	Right	50506.598ft	60846.050ft	502.594ft
Point-Of-Interest	Northing	Easting	Elevation																																		
Antenna	50515.047ft	60845.268ft	512.034ft																																		
Mast	50515.048ft	60845.266ft	502.595ft																																		
Tracks	50517.292ft	60841.860ft	502.595ft																																		
Blade-Arm	50517.292ft	60841.860ft	502.595ft																																		
Blade	50510.981ft	60849.617ft	502.594ft																																		
Center	50510.981ft	60849.617ft	502.594ft																																		
Left	50515.363ft	60853.183ft	502.593ft																																		
Right	50506.598ft	60846.050ft	502.594ft																																		

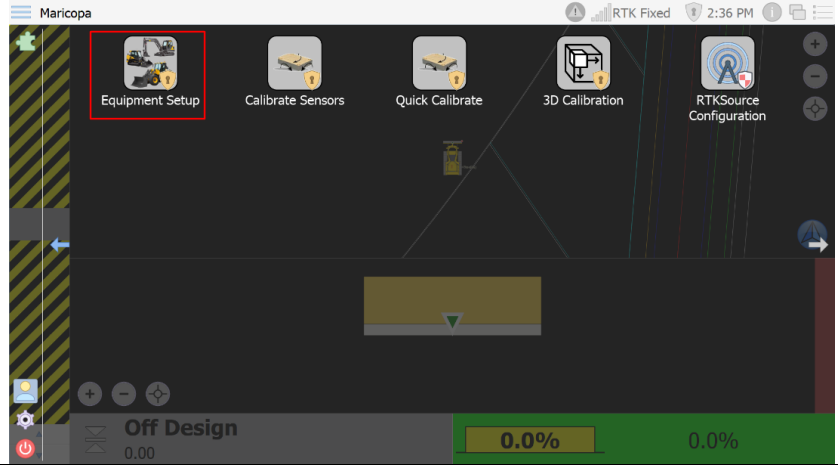
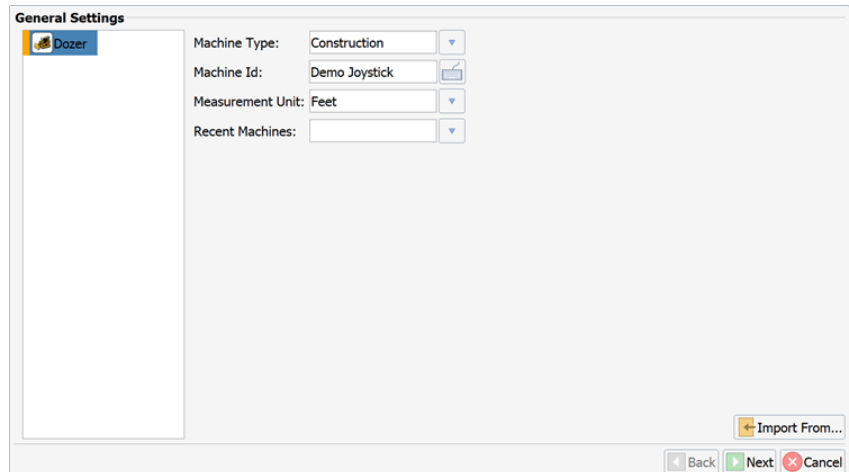


## Save Machine Settings

### Save Machine Settings

To save the settings for your machine, use the following steps.

**Table 6-8: Save Machine Settings**

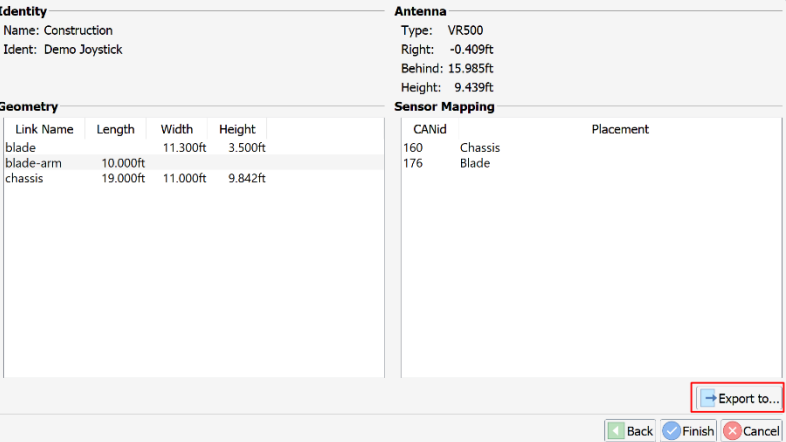
Step	Action
1	<p>To save your machine settings, go to <b>Equipment Setup</b>:</p> 
2	<p>Click <b>Next</b>.</p> 

*Continued on next page*

## Save Machine Settings, Continued

Save Machine Settings, continued

**Table 6-8: Save Machine Settings (continued)**

Step	Action
3	<p>Click <b>Next</b> until the final screen displays. Click <b>Export to...</b> and save the machine settings to a USB thumb drive.</p> 

# Appendix A: Troubleshooting

## Overview

### Introduction

Appendix A provides troubleshooting for the dozer installation.

**Note:** It is important to review each category in detail to eliminate it as a problem.

### Contents

	Topic	See Page
	Troubleshooting	68

## Troubleshooting

**Troubleshooting Table A-1: Troubleshooting**

Issue	Possible Solution
Incorrect Position	<p>First, check a control point with the machine and the survey rover. If the horizontal or vertical position is off, first consider if it is off by a consistent amount throughout the jobsite, or if the position bust varies throughout the job. If it is consistent, consider the following:</p> <ul style="list-style-type: none"> <li>• Check your machine measurements/offsets. If any of these are incorrect, your projected position will be off.</li> <li>• Bad localization. Make sure that all points in your localization file have low residuals and/or that the correct coordinate system is selected (this can make a significant difference).</li> </ul> <p>If there is an inconsistent position bust, check:</p> <ul style="list-style-type: none"> <li>• Sensor mounting was incorrectly selected and/or the sensor was not calibrated. This is evident if your position is correct when flat, but not if you are on a slope.</li> <li>• If the position at the GPS antenna is correct, but the position bust worsens as you approach the cutting edge, it may be a heading offset error.</li> </ul>
No GPS Position	<p>First, check to see if the VR500 is powered on. There are LED lights underneath the receiver. If the receiver is not powered, disconnect the cable and use a multimeter to verify it is receiving power and ground. Check the monitor screen and sky plots to see if there is any data from the receiver. If there is no data, but the receiver is powered, there could be a bad serial connection / mismatched baud rate.</p>

*Continued on next page*

## Troubleshooting, Continued

Troubleshooting, continued

**Table A-1: Troubleshooting (continued)**

Issue	Possible Solution
No RTK	<ol style="list-style-type: none"> <li>1. If using a base station onsite (versus an NTRIP service), first check to verify the base station is turned on.</li> <li>2. If the base station is turned on and sending RTK out over UHF, check to see if the Tx (or TD on some radios) light is flashing once per second.</li> <li>3. Verify that the other rovers on the job site are receiving RTK corrections, if available.</li> <li>4. If it is flashing once per second, check to verify the settings (frequency, bandwidth, forward error corrections, modulation, and protocol) at the base match that of the rover.</li> <li>5. Check to see if the UHF light at the rover is blinking once per second. If it is, refer to #3.</li> <li>6. The receiver may be out of UHF range. Consider installing the external UHF antenna (if using a VR500). You may need to install repeaters. See if the RTK corrections work when the machine is closer to the base station.</li> <li>7. If using NTRIP, check cellular connectivity. One option is to exit GradeMetrix and verify you can go to a website via the browser.</li> </ol>
IronTwo Will Not Power On	<ol style="list-style-type: none"> <li>1. Check to verify the power cable is connected to machine power. The positive should go to a reliable, clean power source and ground to the chassis of the machine.</li> <li>2. Disconnect the cable and refer to the pinout to see if 12V or 24V (depending on machine) is going into the IronTwo by using a multi-meter. If the multimeter reads 12V or 24V, then power is confirmed, and the IronTwo may need to be serviced. If you do not have any power, then check your power source, ground, and all fuses.</li> </ol>

## Appendix B: Technical Specifications

### Overview

---

#### Introduction

Appendix B contains the technical specifications for the VR500 GNSS receiver, the IronTwo control box, and the GMS-1 sensor.

---

#### Contents

	Topic	See Page
	VR500 GNSS Receiver	71
	IronTwo	76
	GMS-1 Sensor	78

---

## VR500 GNSS Receiver

### VR500 Receiver

**Table B-1: VR500 Receiver**

Item	Specification
Receiver type	GPS, GLONASS, BeiDou, Galileo and RTK with carrier phase and L-band dual antenna
Channels	744
Satellites	12 L1CA GPS 12 L1P GPS 12 L2P GPS 12 L2C GPS 15 L5 GPS 12 G1 GLONASS 12 G2 GLONASS 12 G3 GLONASS 22 B1 BeiDou 22 B2 BeiDou 14 B3 BeiDou 12 Galileo E1 12 Galileo E5a 12 Galileo E5b 3 SBAS or 3 additional L1CA GPS 2 L-band
Primary antenna	GPS L1,L1P,L2C,L2P,L5 GLONASS G1,G2,Pcode BeiDou B1,B2,B3 Galileo E1,E5a,E5b L-band

*Continued on next page*

## VR500 GNSS Receiver, Continued

### VR500 Receiver (continued)

**Table B-1: VR500 Receiver (continued)**

Item	Specification			
Secondary antenna	GPS L1,L1P,L2C,L2P GLONASS G1,G2 BeiDou B1,B2 Galileo E1,E5b, L-band			
GPS sensitivity	-142 dBm			
SBAS tracking	3-channel, parallel tracking			
Update rate	10 Hz standard, and 20 Hz available			
Horizontal accuracy		<b>RMS (67%)</b>	<b>2DMRS (95%)</b>	
	RTK <sup>1,2</sup>	8 mm + 1 ppm	15 mm +2 ppm	
	Atlas®	0.04 m	0.08 m	
	SBAS (WAAS) <sup>1</sup>	0.3 m	0.6 m	
	Autonomous, no SA <sup>1</sup>	1.2 m	2.4 m	
Heading accuracy	0.27° RMS			
Pitch/roll accuracy	< 1° RMS			
ROT	145°/s maximum			
Timing (PPS) accuracy	20 ns			
Cold start time	< 60 s typical (no almanac or RTC)			
Warm start time	< 30 s typical (almanac and RTC)			
Hot start time	< 10 s (almanac, RTC, and position)			
Maximum speed	1,850 km/h (999 kts)			
Maximum altitude	18,288 m (60,000 ft)			
Differential options	SBAS, Autonomous, External RTCM v2.3, RTK v3, L-band (Atlas), and DGPS			
Antenna LNA gain input	10 to 40 dB			

*Continued on next page*



## VR500 GNSS Receiver, Continued

### VR500 Communi- cation

**Table B2: Communication**

Item	Specification
Serial ports	3x full-duplex UART's 2x 3.3V CMOS 1x RS-232
CAN	2 CAN ports NMEA2000, ISO-11783
Baud rates	4800 - 115200
Data I/O protocol	NMEA 0183, CAN, Hemisphere GNSS binary
Correction I/O protocol	Hemisphere GNSS' ROX, RTCM v2.3 (DGPS), RTCM v3 (RTK), CMR, CMR+3, and Atlas
Timing output	PPS CMOS, active high, rising edge sync, 10 kΩ, 10 pF load
Event marker input	CMOS, active low, falling edge sync, 10 kΩ 10 pF load
Ethernet	1x 10/100 base-T

### VR500 Power

**Table B-3: Power**

Item	Specification
Input voltage	9-32 VDC
Power consumption	10.8W Maximum (All signals and L-band)
Current consumption	1.2A Maximum

*Continued on next page*

## VR500 GNSS Receiver, Continued

### VR500 Environmental

**Table B-4: VR500 Environmental**

Item	Specification
Operating temperature	-40°C to +70°C (-40°F to +158°F)
Storage temperature	-40°C to +85°C (-40°F to +185°F)
Humidity	95% non-condensing (when installed in an enclosure)
Shock and vibration	50Gs, 11ms half sine pulse, 10 shocks in each direction and axis, total 60 shocks Operational IEC 60068-2-29 MIL-STD-810G  <b>Vibration Sine:</b> 30.6 Grms MIL-STD-810G SAE J1211 ISO 16750-3:2007 <b>Vibration Random:</b> 5.96Grms IEC 60068-2-64 MIL-STD-202F
EMC <sup>4</sup>	CE (ISO 14982 Emissions and Immunity) FCC Part 15, Subpart B CISPR22

### VR500 Mechanical

**Table B-5: Mechanical**

Item	Specification
Dimensions	68.6 L x 22 W x 12.3 H cm
Weight	3.9 kg
Status indication	Power, GNSS, Heading, Radio
Power/Data connector	22-pin environmentally sealed

*Continued on next page*

## VR500 GNSS Receiver, Continued

**VR500 L-band sensor**      **Table B-6: VR500 L-band sensor**

Item	Specification
Receiver type	Single Channel
Channels	1525 to 1560 MHz
Sensitivity	140 dBm
Channel spacing	5.0 kHz
Satellite selection	Manual and Automatic
Reacquisition time	15 seconds (typical)

**VR500 aiding device**      **Table B-7: VR aiding device**

Device	Description
Gyro	Provides smooth heading, fast heading reacquisition, and reliable < 3° heading for periods up to 3 minutes when loss of GPS has occurred. <sup>3</sup>
Tilt sensor	Provide pitch and roll data and assist in fast startup and reacquisition of heading solution.

### VR500

### footnote references

<sup>1</sup>Depends on multipath environment, number of satellites in view, satellite geometry, no SA, and ionospheric activity.

<sup>2</sup>Depends also on baseline length.

<sup>3</sup>Under static conditions.

## IronTwo

### IronTwo system

**Table B-8: System**

Item	Specification
Processor	Intel® Celeron N3350
Storage	SSD 64GB, RAM 4GB
Operating System	Windows 10

### IronTwo mechanical

**Table B-9: Mechanical**

Item	Specification
Dimensions	263.28 W x 171 H x 35.7 D (mm) 10.4 W x 6.7 H x 1.4 D (in)
Weight	1.38 kg (3.04 lbs)
Mount	Adjustable 1.5" RAM ball mount

### IronTwo environmental

**Table B-10: Environmental**

Item	Specification
Operating Temperature	-20°C to +60°C (-4°F to 140°F)
Operating Humidity	30% ~ 90% (non-condensing)
Enclosure	IP65

*Continued on next page*

## IronTwo, Continued

### IronTwo power

**Table B-11: Power**

Item	Specification
Input Voltage	9 - 36 VDC

### IronTwo screen

**Table B-12: Screen**

Item	Specification
Display Type	10.1" TFT edge-to-edge projective capacitive multi-touch screen
Size	192.8 mm × 116.9 mm (7.59" × 4.6")
Resolution	1920 × 1200, 800:1
Luminance	700 cd/m

### IronTwo communication

**Table B-13: Communication**

Item	Specification
Serial Port	2 × RS232
CANBUS	2 × CANBUS
USB	2 × USB 2.0
Ethernet	2x 10/100 LAN
Wi-Fi	IEEE 802.11a/b/g/n/ac
Cellular	4G LTE
Bluetooth	Bluetooth 4.1

## GMS-1 Sensor

### GMS-1 sensor measurement range

**Table B-14: Measurement range**

Item	Specification
Pitch	$\pm 180^\circ$
Roll	$\pm 85^\circ$

### GMS-1 sensor accuracy

**Table B-15: Sensor accuracy**

Item	Specification
Absolute Accuracy	$\pm 0.30^\circ$
Resolution	$\pm 0.01^\circ$
Repeatability	$\pm 0.05^\circ$
Refresh Rate	20 Hz
Base Sensor Cycle	5ms
Hysteresis	$\pm 0.05^\circ$

### GMS-1 sensor electrical

**Table B-16: Electrical**

Item	Specification
Supply Voltage	9 – 30 VDC
Current	$\leq 65\text{mA @ } 10\text{ VDC}$
EMC Emittance	DIN EN 61000-6-4
EMC Immunity	DIN EN 61000-6-2

*Continued on next page*

## GMS-1 Sensor, Continued

GMS-1 sensor  
pin-outs

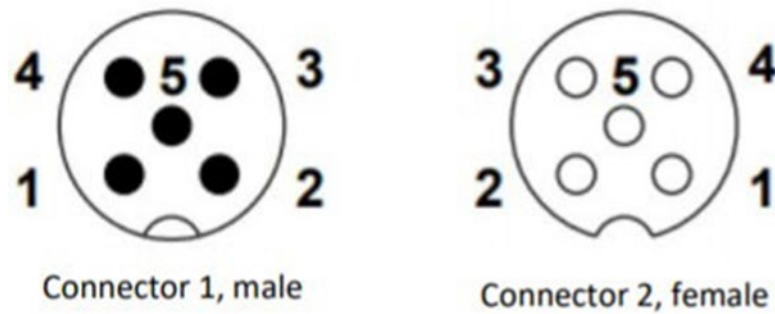


Figure B-1: GMS-1 Sensor pin-out

Table B-17: GMS-1 Sensor pin-out

Signal	Connector	Pin Number
Power Supply	Connector 1	2
GND	Connector 1	3
CAN High	Connector 1	4
CAN Low	Connector 1	5
CAN GND	Connector 1	1
Power Supply	Connector 2	2
GND	Connector 2	3
CAN High	Connector 2	4
CAN Low	Connector 2	5
CAN GND	Connector 2	1

## Appendix C: Cable Pin-Outs

### Overview

---

#### Introduction

Appendix C contains the cable pin-outs used for installation of the VR500 and IronTwo.

---

#### Contents

Topic	See Page
Part Number 051-0426-10	81
Part Number 051-0406-10	83
Part Number 051-0407-10	84
VR500 Installation Schematic	85
Index	87

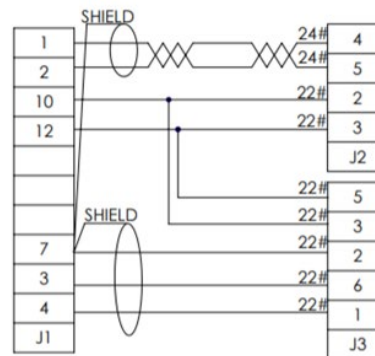
---



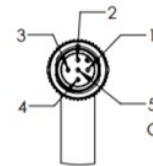
## Part Number 051-0426-10

**P/N: 051-  
0426-  
10**

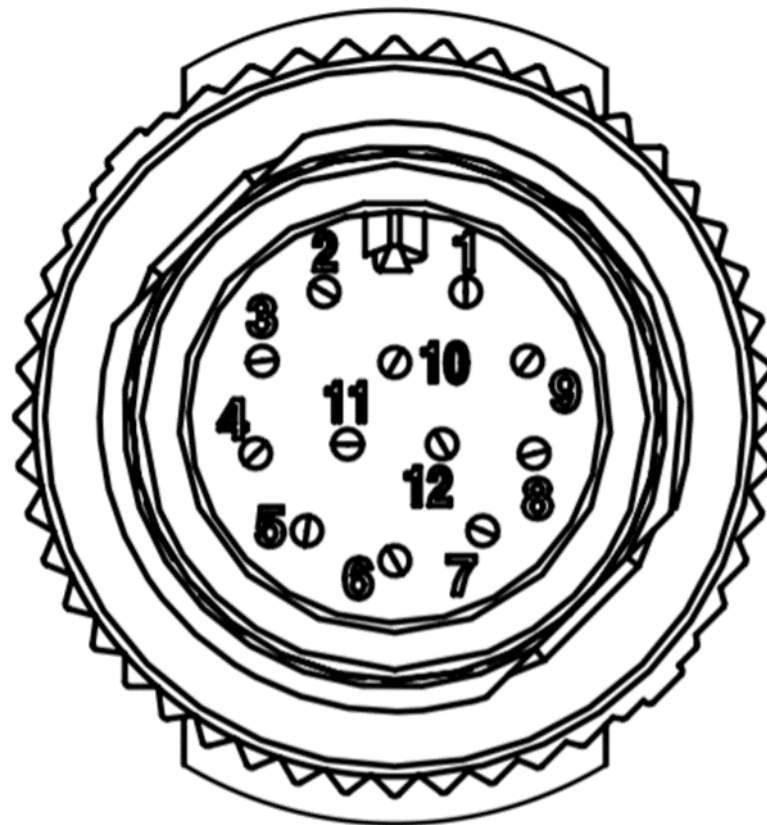
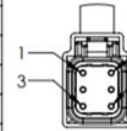
DETAIL A  
SCALE 2 : 1  
CONNECTOR J1  
FRONT VIEW



DETAIL B  
SCALE 1 : 1  
-5  
CONNECTOR J2  
FRONT VIEW



-6 DETAIL C  
 -4 SCALE 1 : 1  
 CONNECTOR J3  
 FRONT VIEW



**Figure C-1: Part Number: 051-0426-10**

Continued on next page

## Part Number 051-0426-10, Continued

P/N: 051-0426-10, continued

**Table C-1: Part Number 051-0426-10 Pin-Outs**

J1	J2	J3	Signal
1	4		CAN High
2	5		CAN Low
3		6	IronTwo RS232 Rx
4		1	IronTwo RS232 Tx
5		2	
6			
7		2	Signal Ground
8			
9			
10	2	3	12V+ Out
11			
12	3	5	Power Ground

## Part Number 051-0406-10

P/N: 051-0406-10

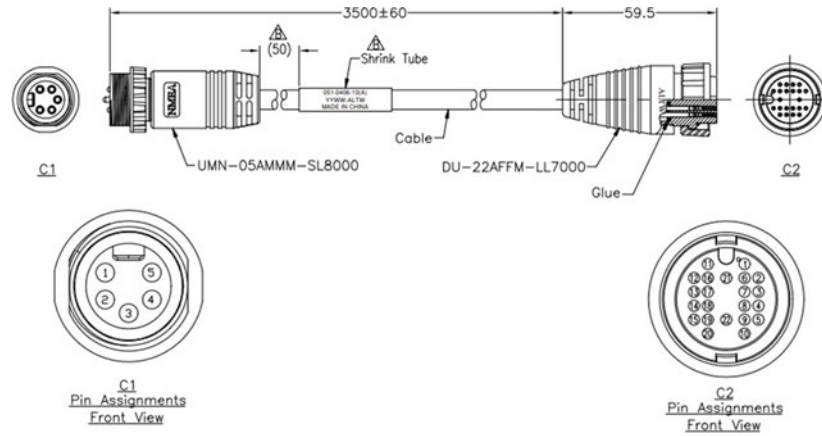


Figure C-2: Part Number: 051-0406-10

Table C-2: Part Number: 051-0406-10 Pin-Outs

C1	C2	Signal
1	21	Power+
2	12	VR500 Port A RS232 Tx
3	11	VR500 Port A RS232 Rx
4	22	Power-
5	13	Signal Ground

## Part Number 051-0407-10

P/N: 051-0407-10

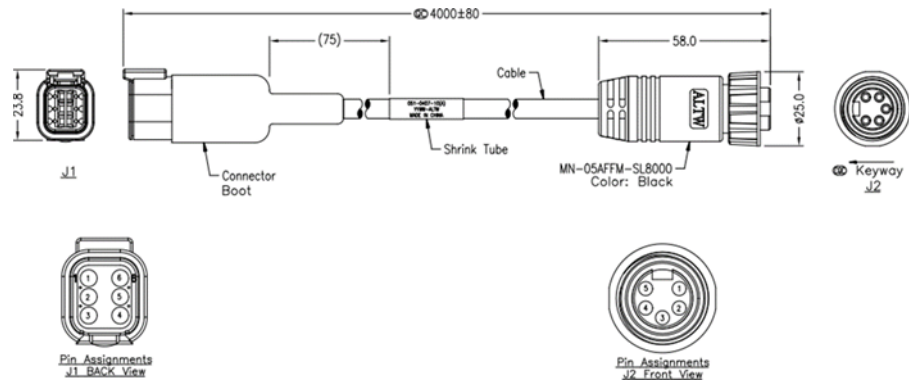


Figure C-3: Part Number: 051-0407-10

Table C-3: Part Number: 051-0407-10 Pin-Outs

J1	J2	Signal
1	3	VR500 Port A RS232 Rx
2	5	Signal Ground
3	1	Power-
4		
5	4	Power+
6	2	VR500 Port A RS232 Tx

## VR500 Installation Schematic

### VR500 Installation Schematic

**Table C-4: Excavator Schematic-R232 and Power, IronTwo -VR500**

051-0426- 10 J1	051-0426- 10 J3	051-0407- 10 J1	051-0407- 10 J2	051-0406- 10 J2	Signal
1					CAN High
2					CAN Low
3	6	6	2	12	IronTwo RS232 Rx/VR5 00 Tx
4	1	1	3	11	IronTwo RS232 Tx/V50 0 Rx
5					
6					
7	2	2	5	13	Signal Ground
8					
9					
10	3	3	1	21	12V+ Out
11					
12	3	5	4	22	Power Ground

## Index

Body sensor ..... 17  
Boom sensor ..... 17  
Firmware ..... 15  
GradeMetrix ..... 6, 8  
**installation** ..... 6, 8, 9

IronTwo ..... 9  
Message interface ..... 17  
RAM ..... 76  
VR1000 ..... 70, 71

# End User License Agreement

---

## End User license agreement

**IMPORTANT** - This is an agreement (the "**Agreement**") between you, the end purchaser ("**Licensee**") and Hemisphere GNSS Inc. ("**Hemisphere**") which permits Licensee to use the Hemisphere software (the "**Software**") that accompanies this Agreement. This Software may be licensed on a standalone basis or may be embedded in a Product. Please read and ensure that you understand this Agreement before installing or using the Software Update or using a Product.

In this agreement any product that has Software embedded in it at the time of sale to the Licensee shall be referred to as a "**Product**". As well, in this Agreement, the use of a Product shall be deemed to be use of the Software which is embedded in the Product.

BY INSTALLING OR USING THE SOFTWARE UPDATE OR THE PRODUCT, LICENSEE THEREBY AGREES TO BE LEGALLY BOUND BY THE TERMS OF THIS AGREEMENT. IF YOU DO NOT AGREE TO THESE TERMS, (I) DO NOT INSTALL OR USE THE SOFTWARE, AND (II) IF YOU ARE INSTALLING AN UPDATE TO THE SOFTWARE, DO NOT INSTALL THE UPDATE AND PROMPTLY DESTROY IT.

HEMISPHERE PROVIDES LIMITED WARRANTIES IN RELATION TO THE SOFTWARE. AS WELL, THOSE WHO USE THE EMBEDDED SOFTWARE DO SO AT THEIR OWN RISK. YOU SHOULD UNDERSTAND THE IMPORTANCE OF THESE AND OTHER LIMITATIONS SET OUT IN THIS AGREEMENT BEFORE INSTALLING OR USING THE SOFTWARE OR THE PRODUCT.

- 1 **LICENSE.** Hemisphere hereby grants to Licensee a non-transferable and non-exclusive license to use the Software as embedded in a Product and all Updates (collectively the "**Software**"), solely in binary executable form.
- 2 **RESTRICTIONS ON USE.** Licensee agrees that Licensee and its employees will not directly or indirectly, in any manner whatsoever:
  - a. install or use more copies of the Software than the number of copies that have been licensed;
  - b. use or install the Software in connection with any product other than the Product the Software was intended to be used or installed on as set out in the documentation that accompanies the Software.
  - c. copy any of the Software or any written materials for any purpose except as part of Licensee's normal backup processes;
  - d. modify or create derivative works based on the Software;
  - e. sub-license, rent, lease, loan or distribute the Software;
  - f. permit any third party to use the Software;
  - g. use or operate Product for the benefit of any third party in any type of service outsourcing, application service, provider service or service bureau capacity;
  - h. reverse engineer, decompile or disassemble the Software or otherwise reduce it to a human perceivable form;
  - i. Assign this Agreement or sell or otherwise transfer the Software to any other party except as part of the sale or transfer of the whole Product.
- 3 **UPDATES.** At Hemisphere's discretion Hemisphere may make Updates available to Licensee. An update ("**Update**") means any update to the Software that is made available to Licensee including error corrections, enhancements and other modifications. Licensee may access, download and install Updates during the Warranty Period only. All Updates that Licensee downloads, installs or uses shall be deemed to be Software and subject to this Agreement. Hemisphere reserves the right to modify the Product without any obligation to notify, supply or install any improvements or alterations to existing Software.
- 4 **SUPPORT.** Hemisphere may make available directly or through its authorized dealers telephone and email support for the Software. Contact Hemisphere to find the authorized dealer near you. As well, Hemisphere may make available user and technical documentation regarding the Software. Hemisphere reserves the right to reduce and limit access to such support at any time.

---

*Continued on next page*

## End User License Agreement, Continued

---

### End User license agreement, continued

5. **BACKUPS AND RECOVERY.** Licensee shall back-up all data used, created or stored by the Software on a regular basis as necessary to enable proper recovery of the data and related systems and processes in the event of a malfunction in the Software or any loss or corruption of data caused by the Software. Licensee shall assume all risks of loss or damage for any failure to comply with the foregoing.
6. **OWNERSHIP.** Hemisphere and its suppliers own all rights, title and interest in and to the Software and related materials, including all intellectual property rights. The Software is licensed to Licensee, not sold.
7. **TRADEMARKS.** Hemisphere GNSS®, the Hemisphere GNSS logo, TRACER™, Crescent®, Eclipse™, e-Dif®, L-Dif™, PocketMax™, S320™, SBX-4™, Vector™, Vega™, Phantom™ XF1™, XF2™, Cygnus™, Atlas™ aRTK, SureFix™, Athena™, Aquila™, Lyra™, Outback Guidance™, and EDRIVE™ are proprietary trademarks of Hemisphere GNSS, Inc. Other trademarks are the properties of their respective owners. and the associated logos are trademarks of Hemisphere. Other trademarks are the property of their respective owners. Licensee may not use any of these trademarks without the consent of their respective owners.
8. **LIMITED WARRANTY.** Hemisphere warrants solely to the Licensee, subject to the exclusions and procedures set forth herein below, that for a period of one (1) year from the original date of purchase of the Product in which it is embedded (the "Warranty Period"), the Software, under normal use and maintenance, will conform in all material respects to the documentation provided with the Software and any media will be free of defects in materials and workmanship. For any Update, Hemisphere warrants, for 90 days from performance or delivery, or for the balance of the original Warranty Period, whichever is greater, that the Update, under normal use and maintenance, will conform in all material respects to the documentation provided with the Update and any media will be free of defects in materials and workmanship. Notwithstanding the foregoing, Hemisphere does not warrant that the Software will meet Licensee's requirements or that its operation will be error free.
9. **WARRANTY EXCLUSIONS.** The warranty set forth in Section (8) will not apply to any deficiencies caused by (a) the Product not being used as described in the documentation supplied to Licensee, (b) the Software having been altered, modified or converted in any way by anyone other than Hemisphere approved by Hemisphere, (c) any malfunction of Licensee's equipment or other software, or (d) damage occurring in transit or due to any accident, abuse, misuse, improper installation, lightning (or other electrical discharge) or neglect other than that caused by Hemisphere. Hemisphere GNSS does not warrant or guarantee the precision or accuracy of positions obtained when using the Software (whether standalone or embedded in a Product). The Product and the Software is not intended and should not be used as the primary means of navigation or for use in safety of life applications. The potential positioning and navigation accuracy obtainable with the Software as stated in the Product or Software documentation serves to provide only an estimate of achievable accuracy based on specifications provided by the US Department of Defense for GPS positioning and DGPS service provider performance specifications, where applicable.
10. **WARRANTY DISCLAIMER.** EXCEPT AS EXPRESSLY SET OUT IN THIS AGREEMENT, HEMISPHERE MAKES NO REPRESENTATION, WARRANTY OR CONDITION OF ANY KIND TO LICENSEE, WHETHER VERBAL OR WRITTEN AND HEREBY DISCLAIMS ALL REPRESENTATIONS, WARRANTIES AND CONDITIONS OF ANY KIND INCLUDING FITNESS FOR A PARTICULAR PURPOSE, MERCHANTABILITY, ACCURACY, RELIABILITY OR THAT THE USE OF THE SOFTWARE WILL BE UNINTERRUPTED OR ERROR-FREE AND HEREBY DISCLAIMS ALL REPRESENTATIONS, WARRANTIES AND CONDITIONS ARISING AS A RESULT OF CUSTOM, USAGE OR TRADE AND THOSE ARISING UNDER STATUTE.
11. **LIMITS ON WARRANTY DISCLAIMER.** Some jurisdictions do not allow the exclusion of implied warranties or conditions, so some of the above exclusions may not apply to Licensee. In that case, any implied warranties or conditions which would then otherwise arise will be limited in duration to ninety (90) days from the date of the license of the Software or the purchase of the Product. The warranties given herein give Licensee specific legal rights and Licensee may have other rights which may vary from jurisdiction to jurisdiction.

---

*Continued on next page*



## End User License Agreement, Continued

---

### End User license agreement, continued

12. **CHANGE TO WARRANTY.** No employee or agent of Hemisphere is authorized to change the warranty provided or the limitation or disclaimer of warranty provisions. All such changes will only be effective if pursuant to a separate agreement signed by senior officers of the respective parties.
13. **WARRANTY CLAIM.** In the event Licensee has a warranty claim Licensee must first check for and install all Updates that are made available. The warranty will not otherwise be honored. Proof of purchase may be required. Hemisphere does not honor claims asserted after the end of the Warranty Period.
14. **LICENSEE REMEDIES.** In all cases which involve a failure of the Software to conform in any material respect to the documentation during the Warranty Period or a breach of a warranty, Hemisphere's sole obligation and liability, and Licensee's sole and exclusive remedy, is for Hemisphere, at Hemisphere's option, to (a) repair the Software, (b) replace the Software with software conforming to the documentation, or (c) if Hemisphere is unable, on a reasonable commercial basis, to repair the Software or to replace the Software with conforming software within ninety (90) days, to terminate this Agreement and thereafter Licensee shall cease using the Software. Hemisphere will also issue a refund for the price paid by Licensee less an amount on account of amortization, calculated on a straight-line basis over a deemed useful life of three (3) years.
15. **LIMITATION OF LIABILITY.** IN NO EVENT WILL HEMISPHERE BE LIABLE TO LICENSEE FOR ANY INCIDENTAL, CONSEQUENTIAL, SPECIAL OR INDIRECT DAMAGES INCLUDING ARISING IN RELATION TO ANY LOSS OF DATA, INCOME, REVENUE, GOODWILL OR ANTICIPATED SAVINGS EVEN IF HEMISPHERE HAS BEEN INFORMED OF THE POSSIBILITY OF SUCH LOSS OR DAMAGE. FURTHER, IN NO EVENT WILL HEMISPHERE'S TOTAL CUMULATIVE LIABILITY HEREUNDER, FROM ALL CAUSES OF ACTION OF ANY KIND, EXCEED THE TOTAL AMOUNT PAID BY LICENSEE TO HEMISPHERE TO PURCHASE THE PRODUCT. THIS LIMITATION AND EXCLUSION APPLIES IRRESPECTIVE OF THE CAUSE OF ACTION, INCLUDING BUT NOT LIMITED TO BREACH OF CONTRACT, NEGLIGENCE, STRICT LIABILITY, TORT, BREACH OF WARRANTY, MISREPRESENTATION OR ANY OTHER LEGAL THEORY AND WILL SURVIVE A FUNDAMENTAL BREACH.
16. **LIMITS ON LIMITATION OF LIABILITY.** Some jurisdictions do not allow for the limitation or exclusion of liability for incidental or consequential damages, so the above limitation or exclusion may not apply to Licensee and Licensee may also have other legal rights which may vary from jurisdiction to jurisdiction.
17. **BASIS OF BARGAIN.** Licensee agrees and acknowledges that Hemisphere has set its prices and the parties have entered into this Agreement in reliance on the limited warranties, warranty disclaimers and limitations of liability set forth herein, that the same reflect an agreed-to allocation of risk between the parties (including the risk that a remedy may fail of its essential purpose and cause consequential loss), and that the same forms an essential basis of the bargain between the parties. Licensee agrees and acknowledges that Hemisphere would not have been able to sell the Product at the amount charged on an economic basis without such limitations.
18. **PROPRIETARY RIGHTS INDEMNITY.** Hemisphere shall indemnify, defend and hold harmless Licensee from and against any and all actions, claims, demands, proceedings, liabilities, direct damages, judgments, settlements, fines, penalties, costs and expenses, including royalties and attorneys' fees and related costs, in connection with or arising out of any actual infringement of any third party patent, copyright or other intellectual property right by the Software or by its use, in accordance with this Agreement and documentation, PROVIDED THAT: (a) Hemisphere has the right to assume full control over any action, claim, demand or proceeding, (b) Licensee shall promptly notify Hemisphere of any such action, claim, demand, or proceeding, and (c) Licensee shall give Hemisphere such reasonable assistance and tangible material as is reasonably available to Licensee for the defense of the action, claim, demand or proceeding. Licensee shall not settle or compromise any of same for which Hemisphere has agreed to assume responsibility without Hemisphere's prior written consent. Licensee may, at its sole cost and expense, retain separate counsel from the counsel utilized or retained by Hemisphere.
19. **INFRINGEMENT.** If use of the Software may be enjoined due to a claim of infringement by a third party then, at its sole discretion and expense, Hemisphere may do one of the following: (a)

---

*Continued on next page*

## End User License Agreement, Continued

---

### End User license agreement, continued

negotiate a license or other agreement so that the Product is no longer subject to such a potential claim, (b) modify the Product so that it becomes non-infringing, provided such modification can be accomplished without materially affecting the performance and functionality of the Product, (c) replace the Software, or the Product, with non-infringing software, or product, of equal or better performance and quality, or (d) if none of the foregoing can be done on a commercially reasonable basis, terminate this license and Licensee shall stop using the Product and Hemisphere shall refund the price paid by Licensee less an amount on account of amortization, calculated on a straight-line basis over a deemed useful life of three (3) years.

19. The foregoing sets out the entire liability of Hemisphere and the sole obligations of Hemisphere to Licensee in respect of any claim that the Software or its use infringes any third party rights.
20. **INDEMNIFICATION.** Except in relation to an infringement action, Licensee shall indemnify and hold Hemisphere harmless from any and all claims, damages, losses, liabilities, costs and expenses (including reasonable fees of lawyers and other professionals) arising out of or in connection with Licensee's use of the Product, whether direct or indirect, including without limiting the foregoing, loss of data, loss of profit or business interruption. **TERMINATION.** Licensee may terminate this Agreement at any time without cause. Hemisphere may terminate this Agreement on 30 days notice to Licensee if Licensee fails to materially comply with each provision of this Agreement unless such default is cured within the 30 days. Any such termination by a party shall be in addition to and without prejudice to such rights and remedies as may be available, including injunction and other equitable remedies. Upon receipt by Licensee of written notice of termination from Hemisphere or termination by Licensee, Licensee shall at the end of any notice period (a) cease using the Software; and (b) return to Hemisphere (or destroy and provide a certificate of a Senior Officer attesting to such destruction) the Software and all related material and any magnetic or optical media provided to Licensee. The provisions of Sections 6), 7), 8), 9), 10), 15), 21), 26) and 27) herein shall survive the expiration or termination of this Agreement for any reason.
21. **EXPORT RESTRICTIONS.** Licensee agrees that Licensee will comply with all export control legislation of Canada, the United States, Australia and any other applicable country's laws and regulations, whether under the Arms Export Control Act, the International Traffic in Arms Regulations, the Export Administration Regulations, the regulations of the United States Departments of Commerce, State, and Treasury, or otherwise as well as the export control legislation of all other countries.
22. **PRODUCT COMPONENTS.** The Product may contain third party components. Those third party components may be subject to additional terms and conditions. Licensee is required to agree to those terms and conditions in order to use the Product.
23. **FORCE MAJEURE EVENT.** Neither party will have the right to claim damages as a result of the other's inability to perform or any delay in performance due to unforeseeable circumstances beyond its reasonable control, such as labor disputes, strikes, lockouts, war, riot, insurrection, epidemic, Internet virus attack, Internet failure, supplier failure, act of God, or governmental action not the fault of the non-performing party.
24. **FORUM FOR DISPUTES.** The parties agree that the courts located in Calgary, Alberta, Canada and the courts of appeal there from will have exclusive jurisdiction to resolve any disputes between Licensee and Hemisphere concerning this Agreement or Licensee's use or inability to use the Software and the parties hereby irrevocably agree to attorn to the jurisdiction of those courts. Notwithstanding the foregoing, either party may apply to any court of competent jurisdiction for injunctive relief.
25. **APPLICABLE LAW.** This Agreement shall be governed by the laws of the Province of Alberta, Canada, exclusive of any of its choice of law and conflicts of law jurisprudence.
26. **CISG.** The United Nations Convention on Contracts for the International Sale of Goods will not apply to this Agreement or any transaction hereunder.

**GENERAL.** This is the entire agreement between Licensee and Hemisphere relating to the Product and Licensee's use of the same, and supersedes all prior, collateral or contemporaneous oral or written representations, warranties or agreements regarding the same. No amendment to or modification of this Agreement will be binding unless in writing and signed by duly authorized representatives of the parties. Any and all terms and conditions set out in any correspondence between the parties or set out in a purchase order which are different from or in addition to the terms and conditions set forth herein, shall have no application and no written notice of same shall be required. In the event that one or more of the provisions of this Agreement is found to be illegal or unenforceable, this Agreement shall not be rendered inoperative but the remaining provisions shall continue in full force and effect.



Hemisphere GNSS Inc.  
8515 East Anderson Drive  
Scottsdale, Arizona, US 85255

Phone: 480-348-6380

Fax: 480-270-5070

[PRECISION@HGNSS.COM](mailto:PRECISION@HGNSS.COM)

[WWW.HGNSS.COM](http://WWW.HGNSS.COM)